
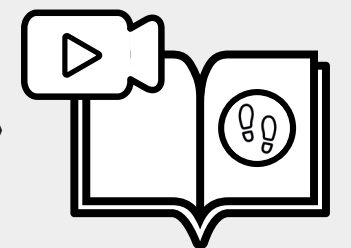
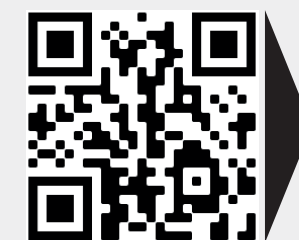


X-Protect

Classic Pedestrian + Impact

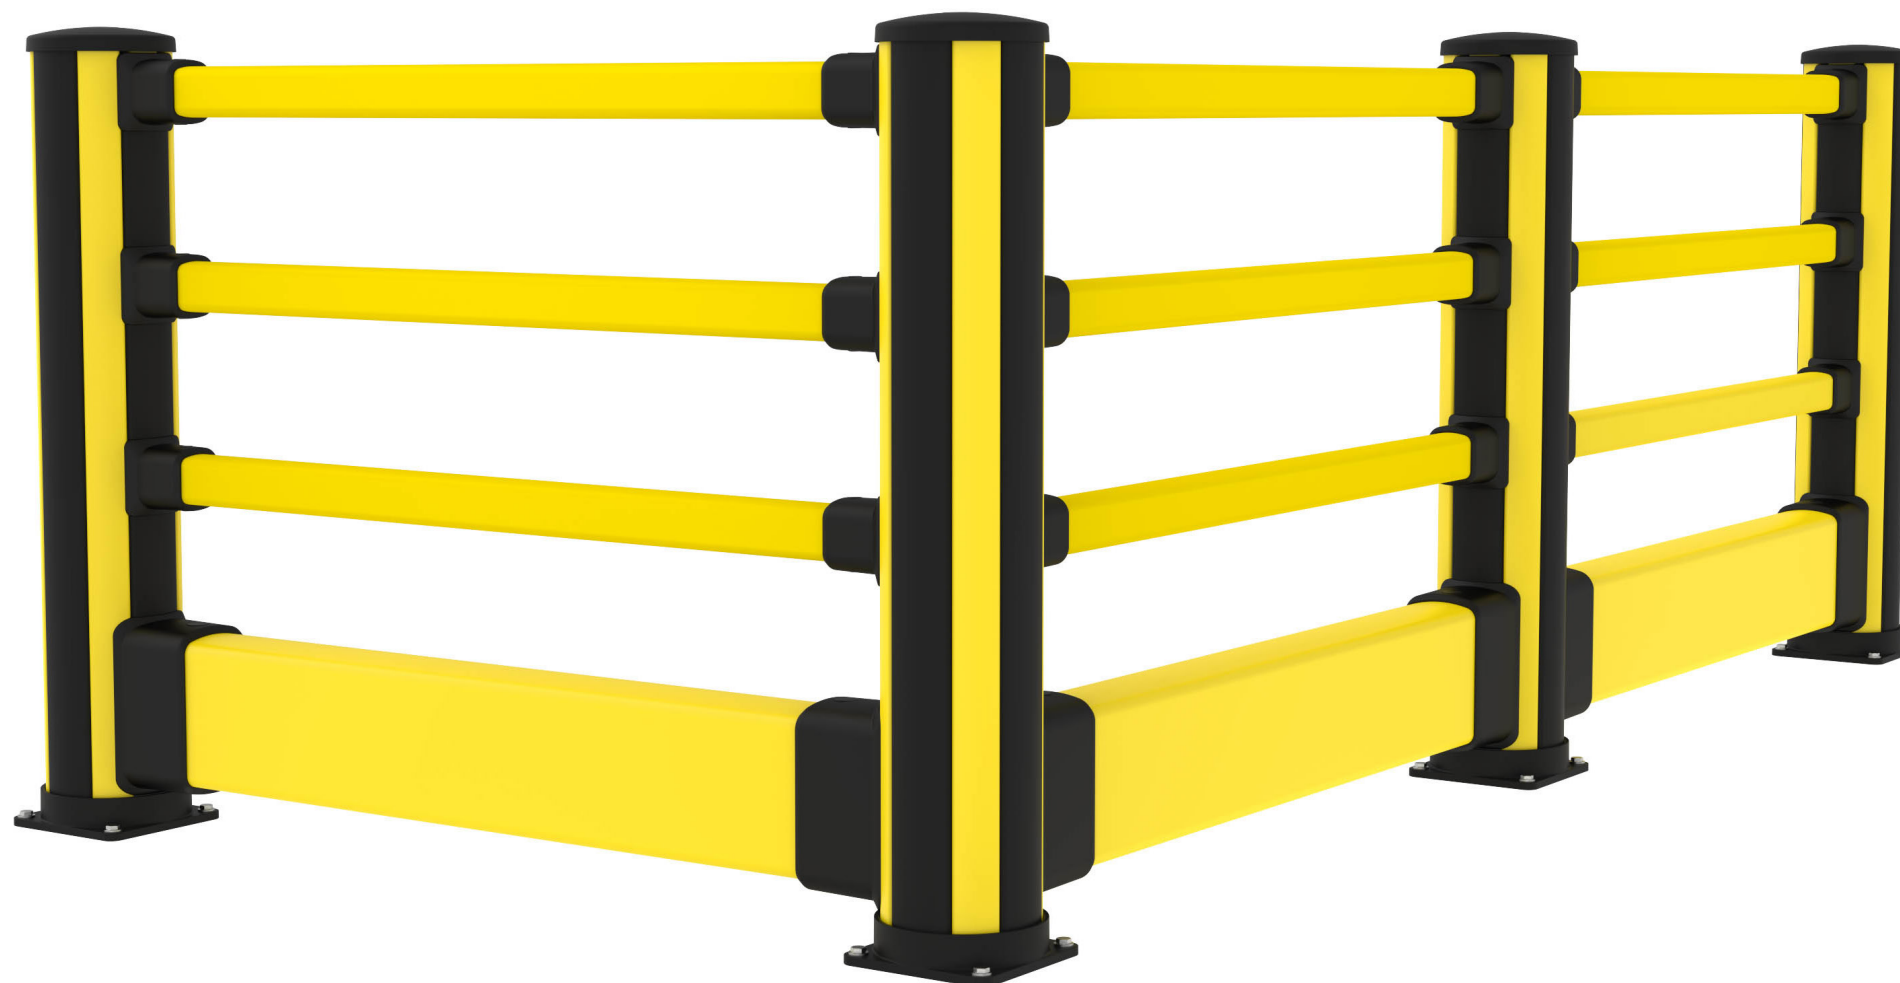

AXELENT AB

WWW.AXELENT.COM



--	--	--	--	--	--	--	--	--	--	--	--	--	--

The pin hole location, size and adjacent material integrity are critical to the overall system function and performance. Onsite alternations should only be made with the Axelent drilling template and by competent persons.

