RECOMMENDED INSTALLATION HEIGHT FOR EACH VAN MODEL

BLACKSTONE

KEEP YOUR VAN SAFE.

WARNINGS

Always read the mounting instructions carefully.

The measures given on the following pages are **recommended** but not binding.

Daken S.p.A. reserves the right to make any change or variation to the products.

Each mounting must be **assessed** by the **installer** on a case-by-case basis and in consideration of the vehicle characteristics.

INDEX

CITROËN

Nemo (2007-2013) 4
Berlingo (> 2018) 5
Jumpy (> 2017) 6
Jumper (> 2014) 7

DACIA

Dokker (2013-2021) 8

FIAT

Fiorino (> 2007) 9
Doblò (> 2009) 10
Talento (2016-2020) 11
Scudo (> 2021) 12
Ducato (> 2014) 13

FORD

Courier (2013 - 2024) 14
Courier (> 2024) 15
Connect (> 2014) 16
Custom (> 2012) 17
Transit (> 2014) 18

HYUNDAI

H350 (> 2016) 19

IVECO

Daily (> 2014) 20

MAN

TGE 3140 (> 2017) 21

MAXUS

Edeliver 3 (> 2018) 22
Edeliver 9 (> 2019) 23

MERCEDES

Citan (<= 2021) 24
Citan (> 2021) 25
Vito (> 2014) 26
Sprinter (> 2018) 27

NISSAN

E-nv 200 (2014-2021) 28
Nv 250 (2019-2021) 29
Townstar Van (> 2021) 30
Primastar / nv-300 (>2016) 31
Interstar (2022) 32

OPEL

Combo (> 2018) 33
Vivaro B (2014-2019) 34
Vivaro C (> 2019) 35
Movano (> 2022) 36

PEUGEOT

Bipper (2007-2016) 37
Partner (> 2018) 38
Expert (> 2016) 39
Boxer (> 2014) 40

RENAULT

Kangoo (2008-2021) 41
Kangoo Van (>2021) 42
Express Van (> 2020) 43
Trafic (> 2014) 44
Master (2019-2023) 45
Master (>2024) 46

TOYOTA

Proace City (> 2020) 47
Proace (> 2016) 48

VOLKSWAGEN

Caddy (2021 - 2024) 49
Caddy (> 2024) 50
Transporter (> 2014) 51
ID-Buzz (> 2022) 52
Crafter (> 2016) 53

BLACKSTONE


BLACKSTONE

CITROËN

CITROËN NEMO
2007-2013




INSTALLATION ON THE REAR DOOR

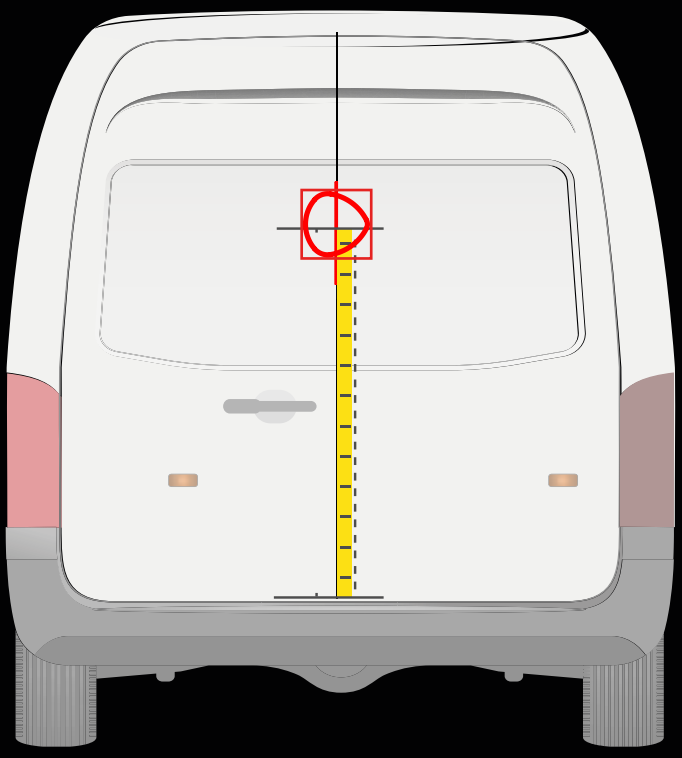

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**80 cm**

INSTALLATION ON THE LATERAL DOOR

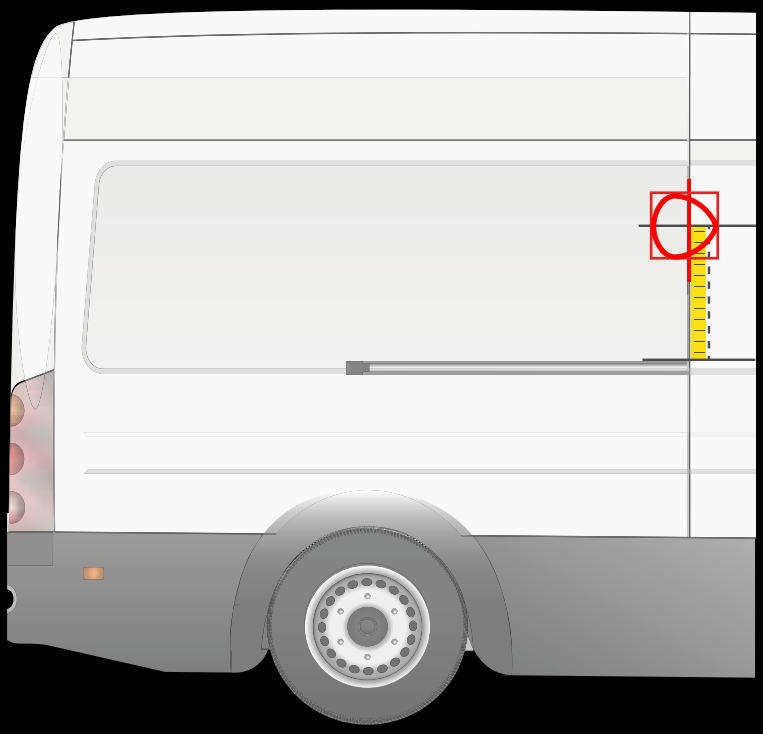

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

CITROËN

CITROËN BERLINGO > 2018




INSTALLATION ON THE REAR DOOR

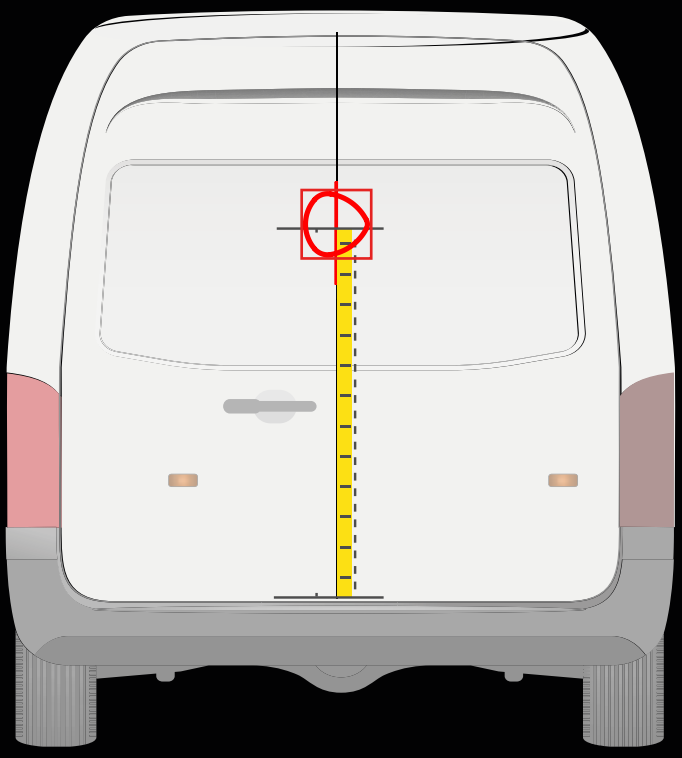

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**80 cm**

INSTALLATION ON THE LATERAL DOOR

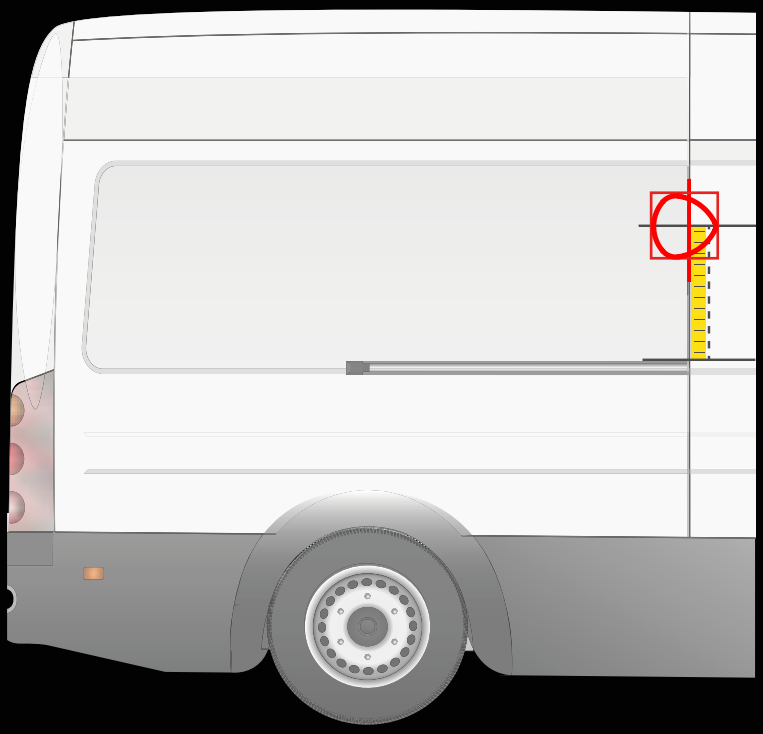

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**25 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

CITROËN

CITROËN JUMPY > 2017




INSTALLATION ON THE REAR DOOR

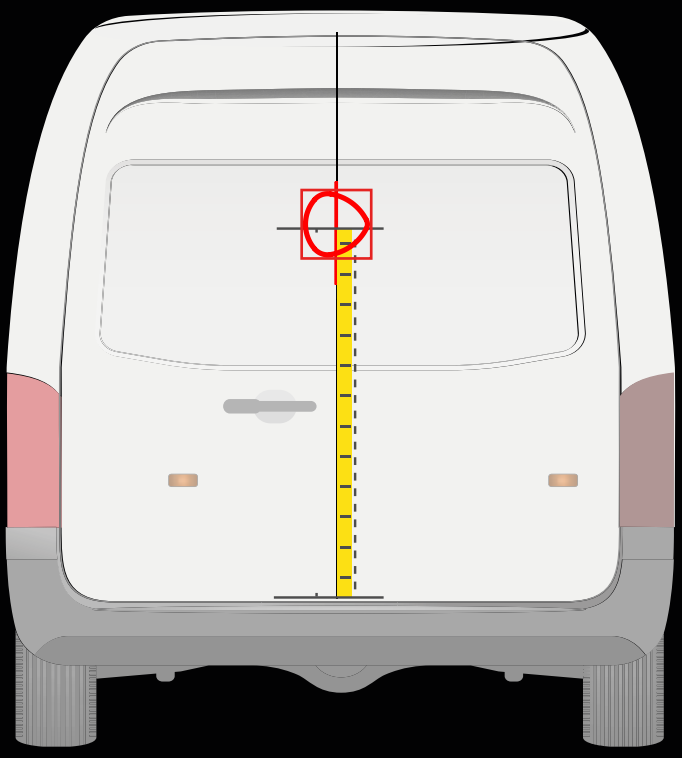

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**95 cm**

INSTALLATION ON THE LATERAL DOOR

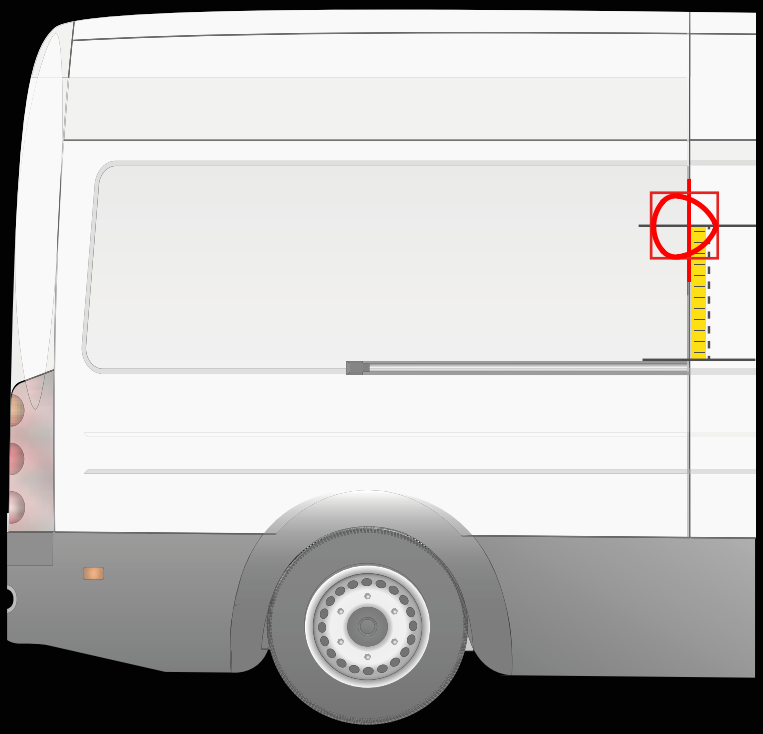

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

CITROËN

CITROËN JUMPER > 2014




INSTALLATION ON THE REAR DOOR

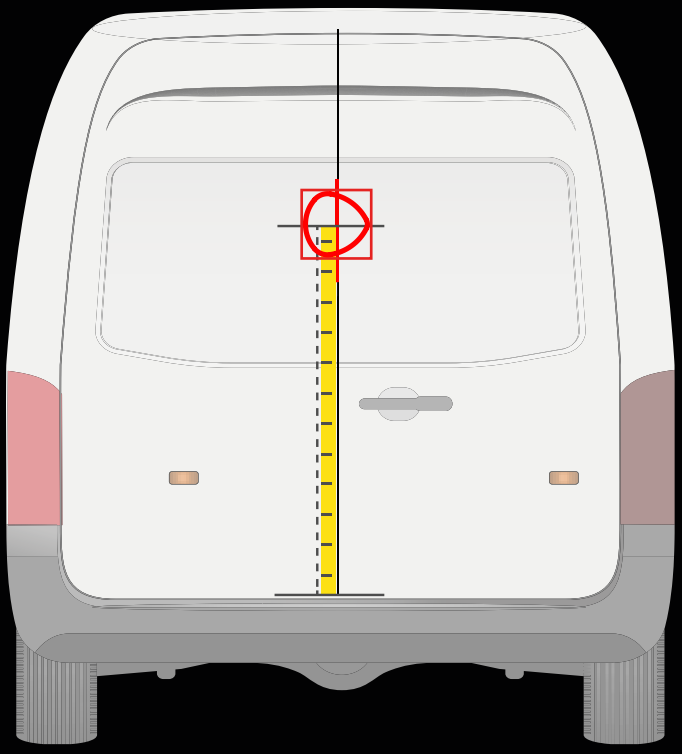

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**112 cm**

INSTALLATION ON THE LATERAL DOOR

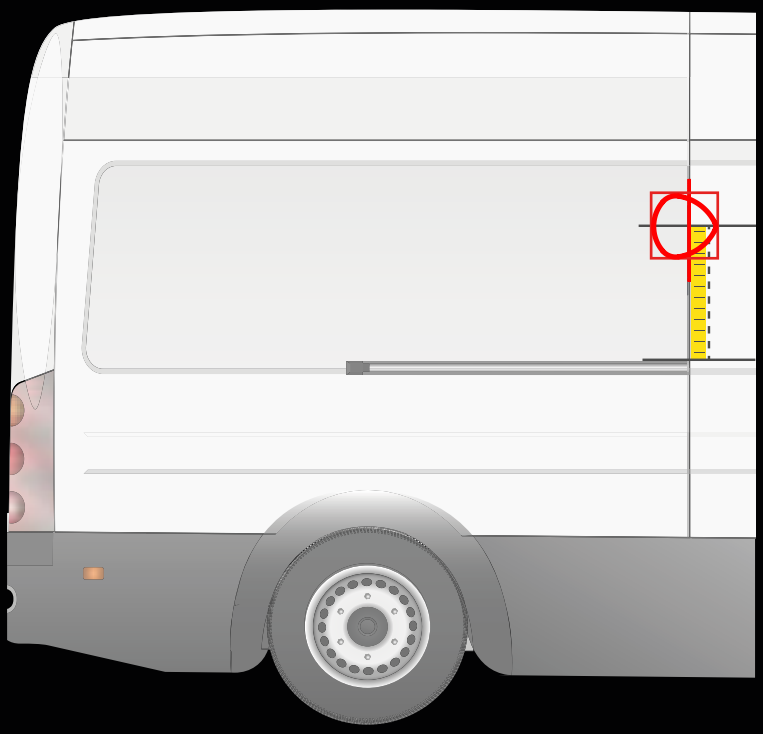

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

DACIA

DACIA DOKKER
2013-2021




INSTALLATION ON THE REAR DOOR

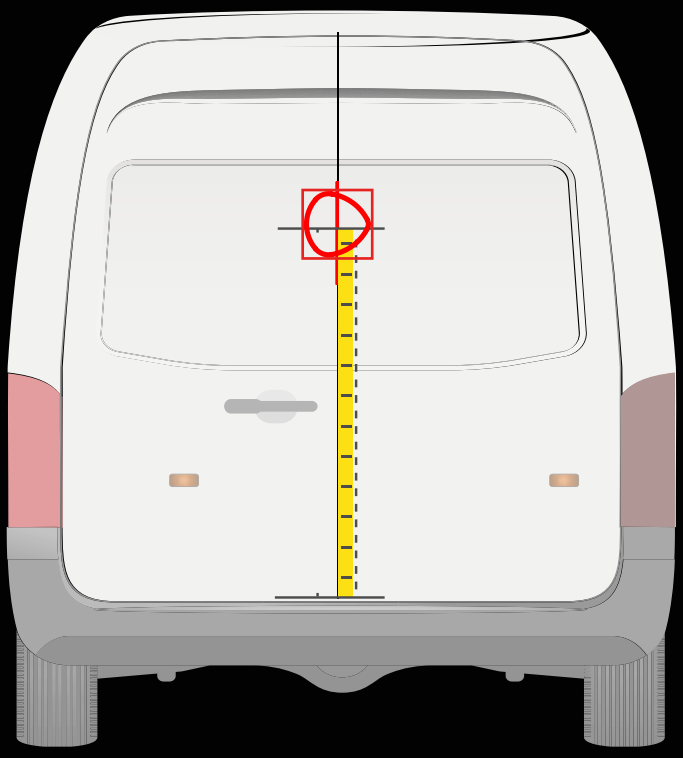

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**75 cm**

INSTALLATION ON THE LATERAL DOOR

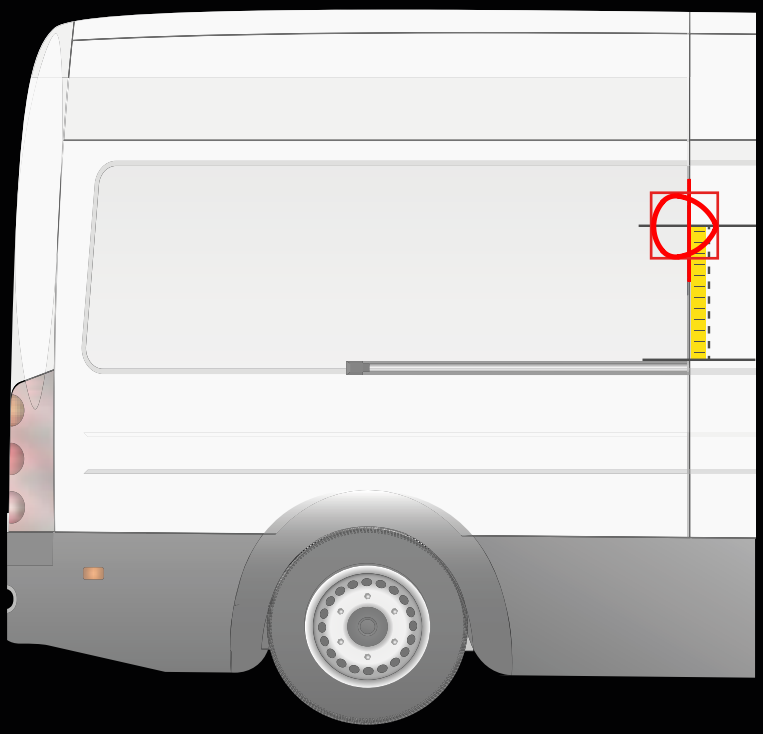

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**15 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

BLACKSTONE

FIAT FIORINO
> 2007




INSTALLATION ON THE REAR DOOR

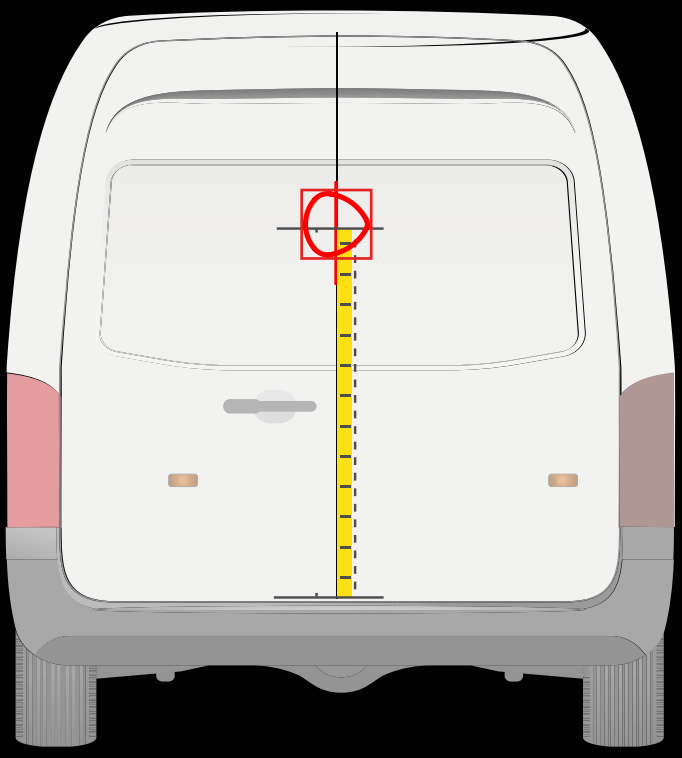

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**80 cm**

INSTALLATION ON THE LATERAL DOOR

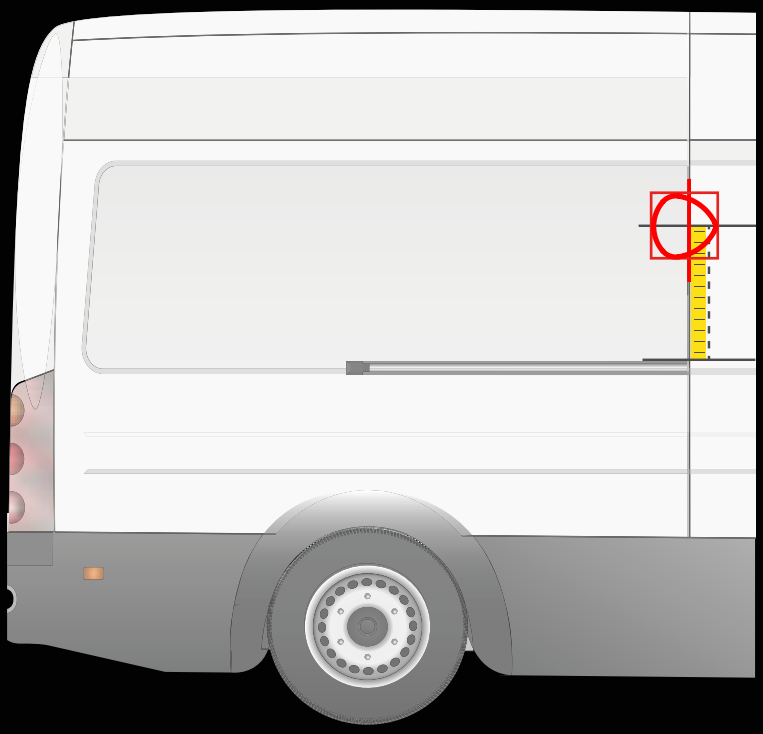

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE



FIAT DOBLÒ
> 2009




INSTALLATION ON THE REAR DOOR

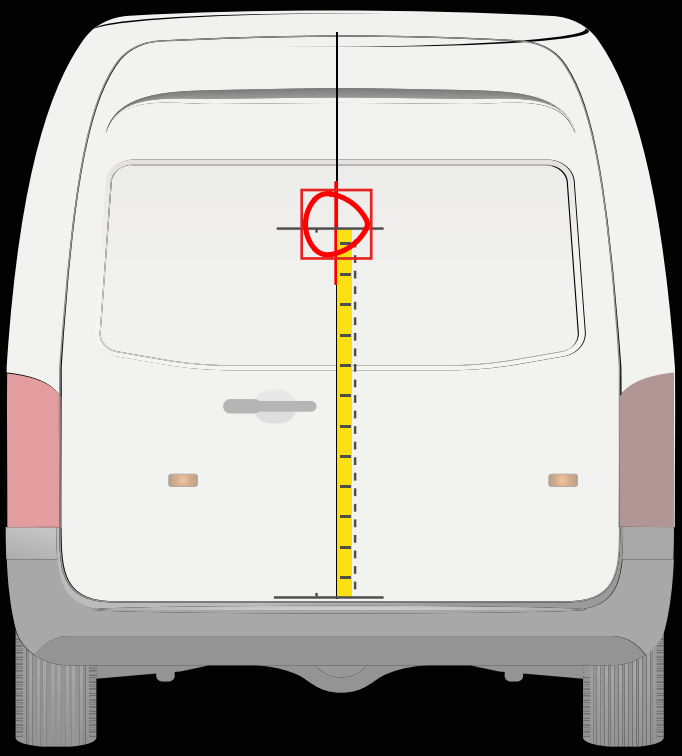

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**90 cm**

INSTALLATION ON THE LATERAL DOOR

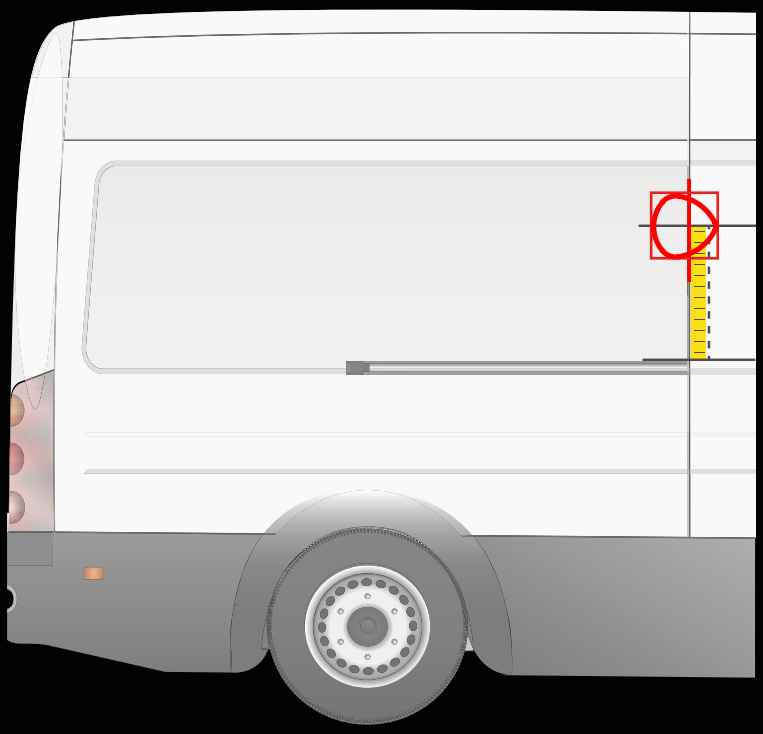

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

FIAT

FIAT TALENTO
2016 - 2020




INSTALLATION ON THE REAR DOOR

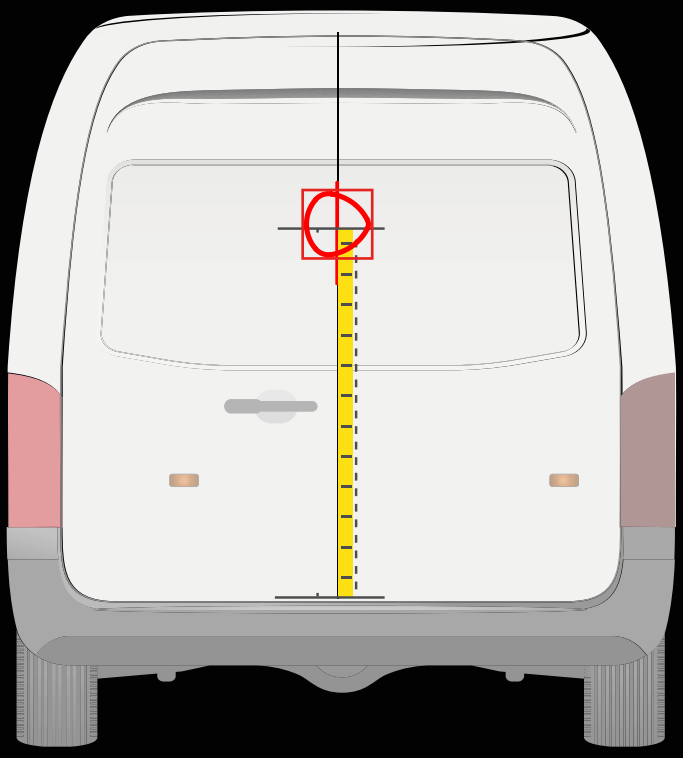

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**84 cm**

INSTALLATION ON THE LATERAL DOOR

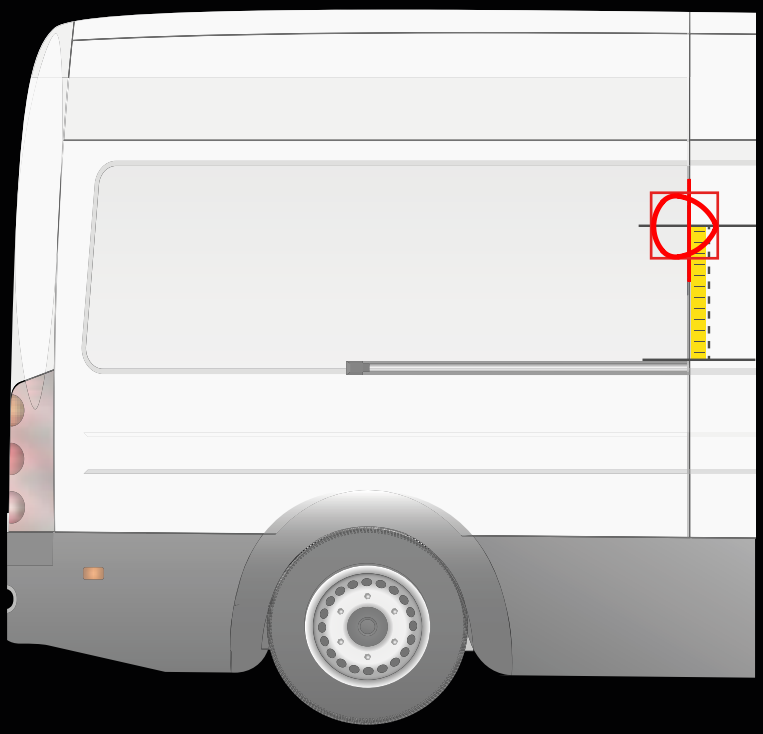

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

FIAT

FIAT SCUDO
> 2021




INSTALLATION ON THE REAR DOOR

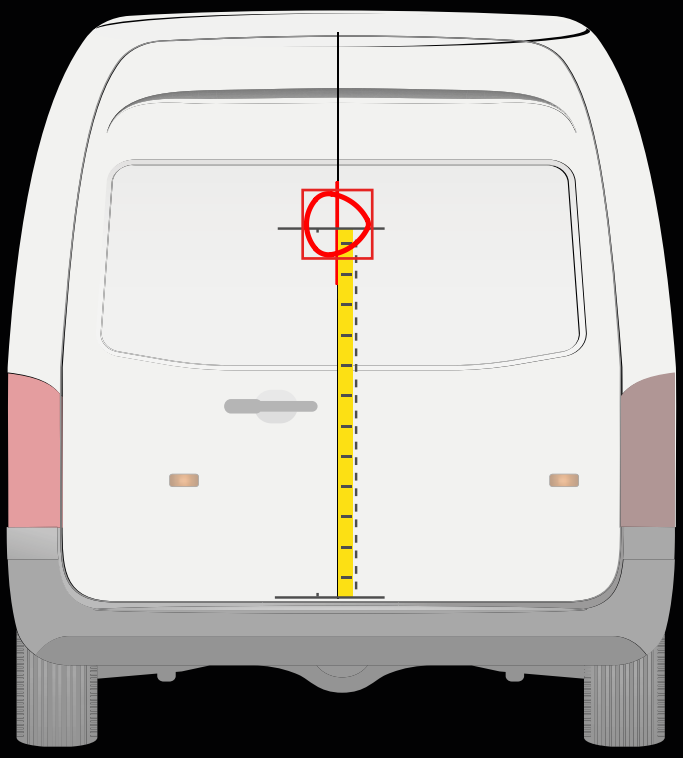

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**95 cm**

INSTALLATION ON THE LATERAL DOOR

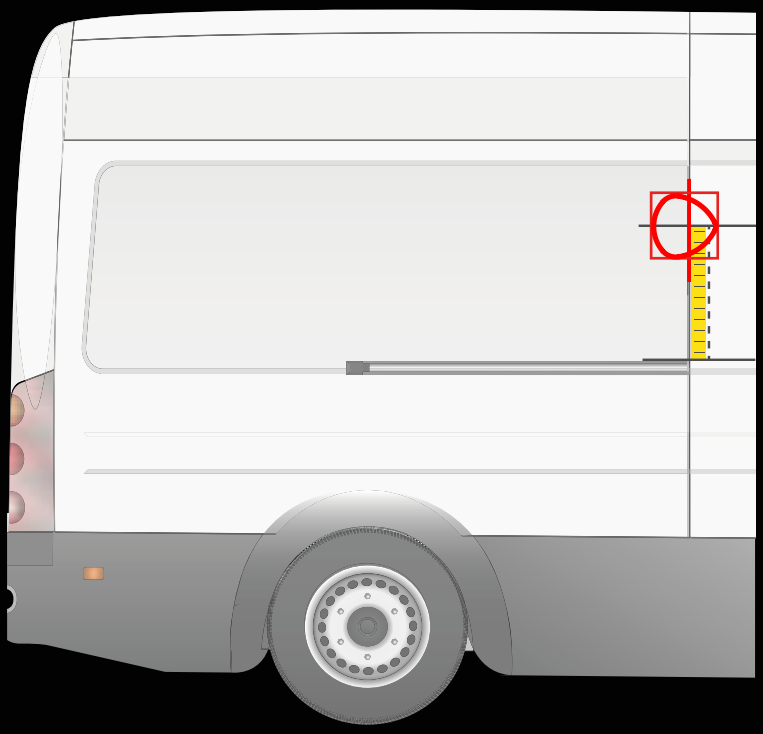

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

BLACKSTONE

FIAT DUCATO
> 2014




INSTALLATION ON THE REAR DOOR

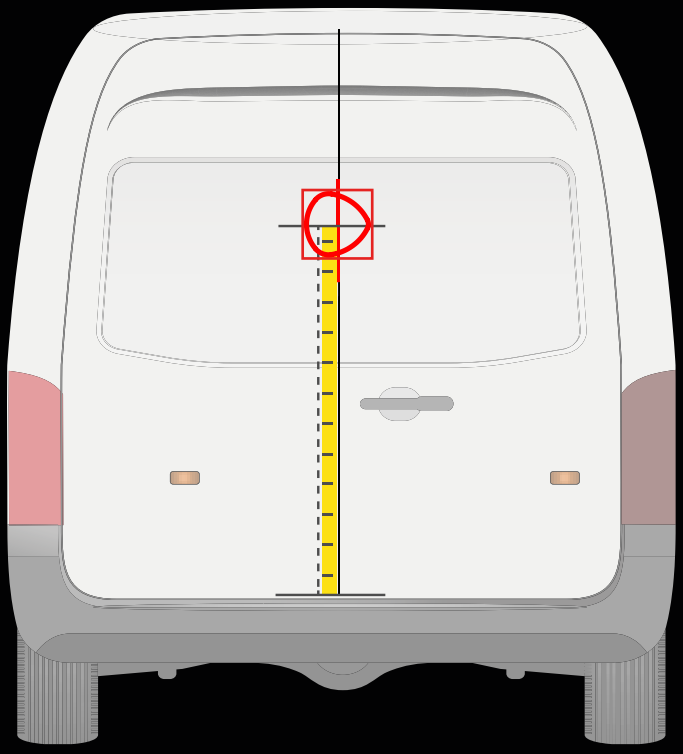

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**112 cm**

INSTALLATION ON THE LATERAL DOOR

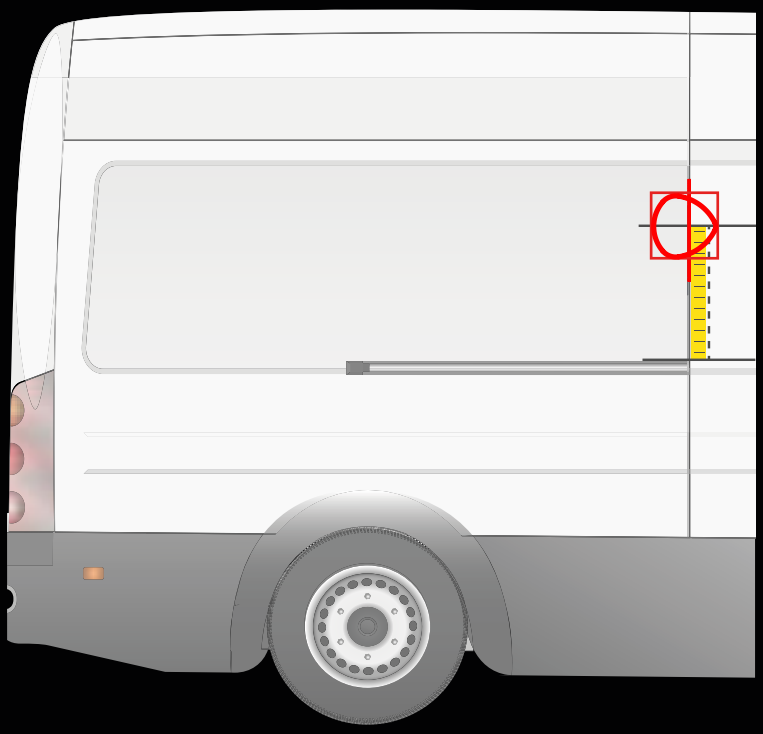

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

BLACKSTONE

FORD COURIER
2013 - 2024




INSTALLATION ON THE REAR DOOR

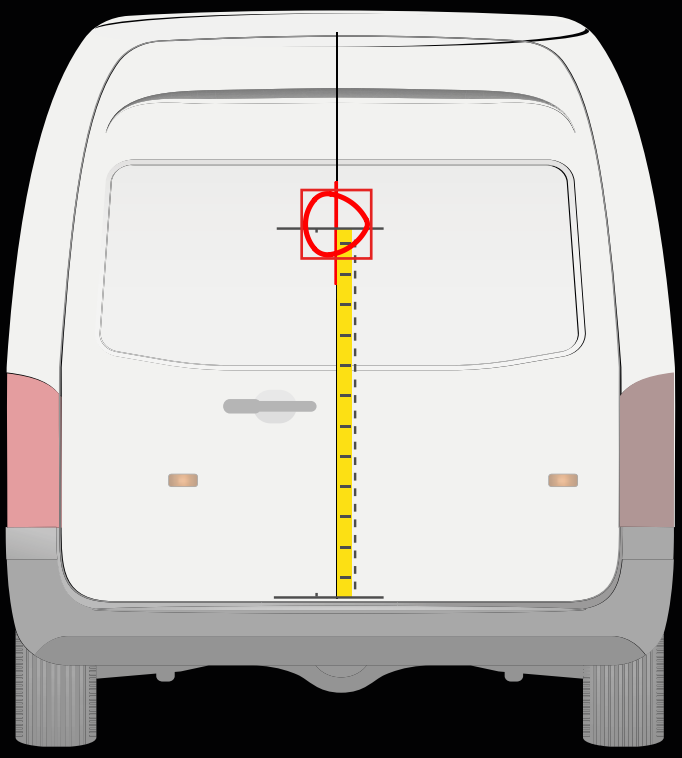

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**95 cm**

INSTALLATION ON THE LATERAL DOOR

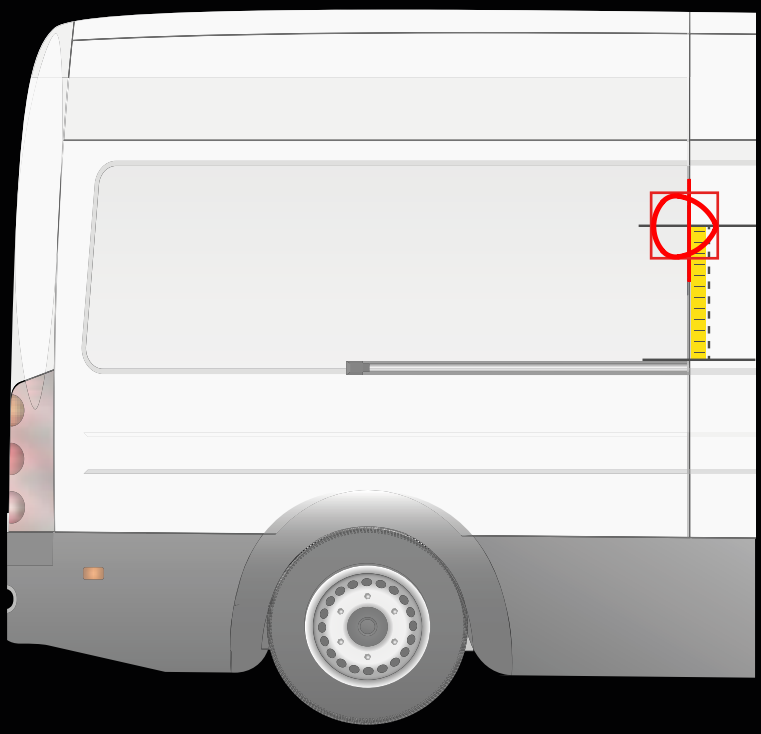

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**15 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

BLACKSTONE

FORD COURIER
> 2024




INSTALLATION ON THE REAR DOOR

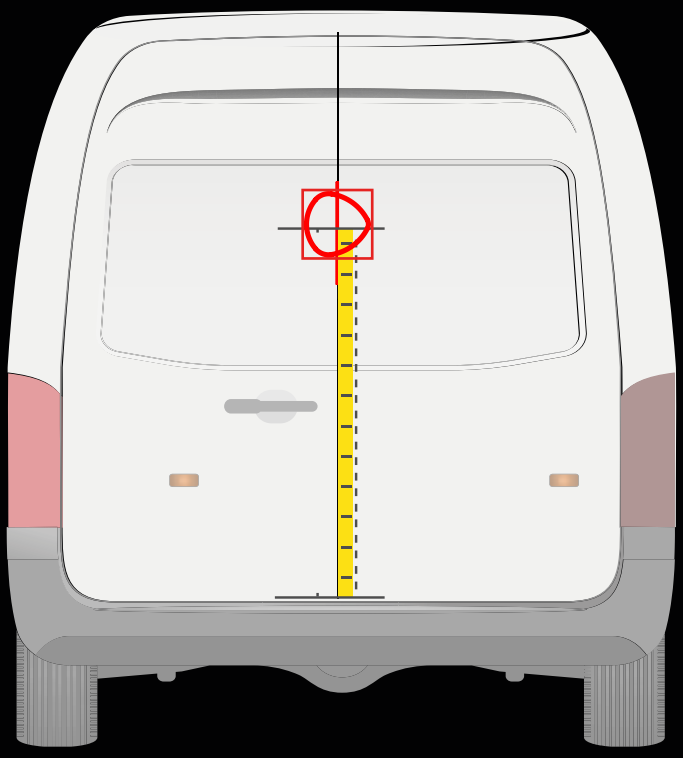

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**85 cm**

INSTALLATION ON THE LATERAL DOOR

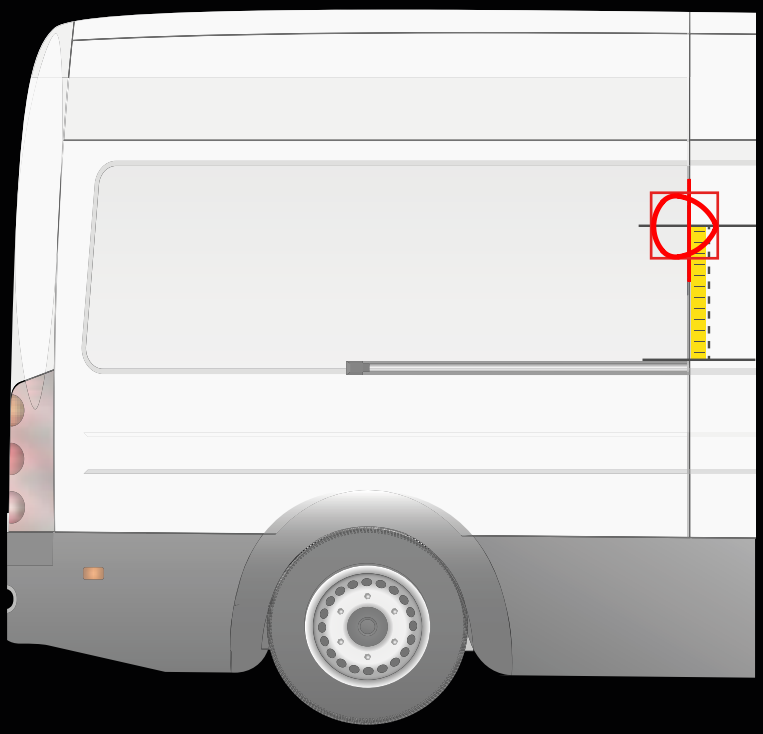

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

BLACKSTONE

FORD CONNECT
> 2014




INSTALLATION ON THE REAR DOOR

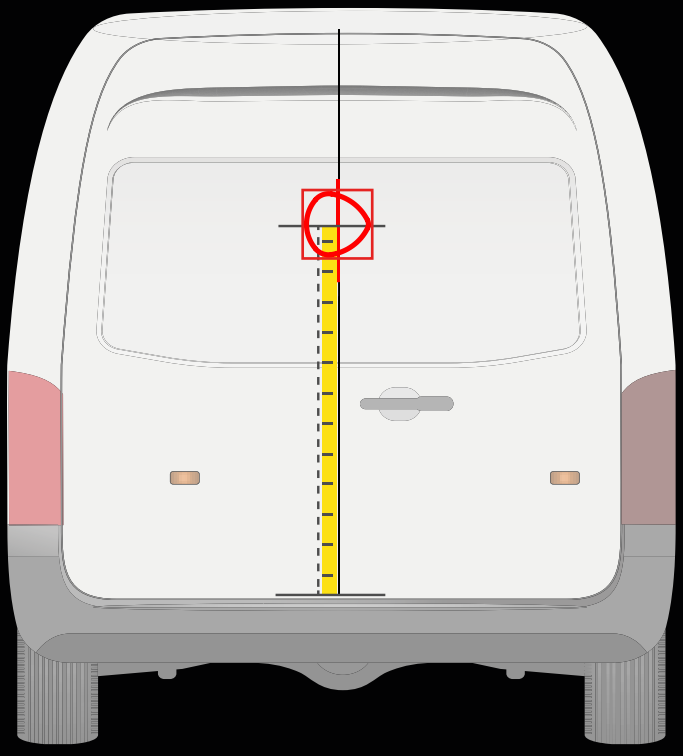

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**85 cm**

INSTALLATION ON THE LATERAL DOOR

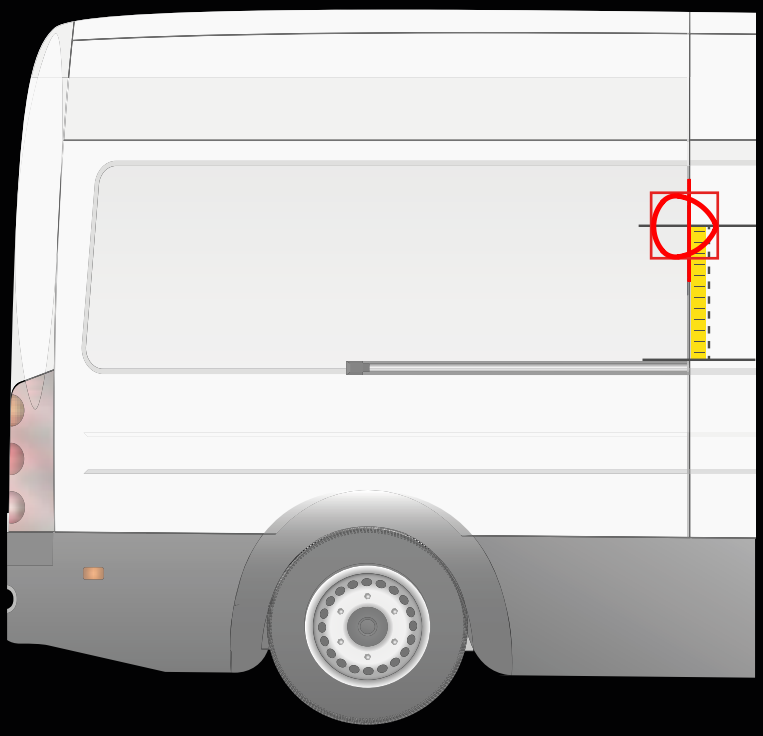

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**27 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

BLACKSTONE

FORD CUSTOM
> 2012




INSTALLATION ON THE REAR DOOR

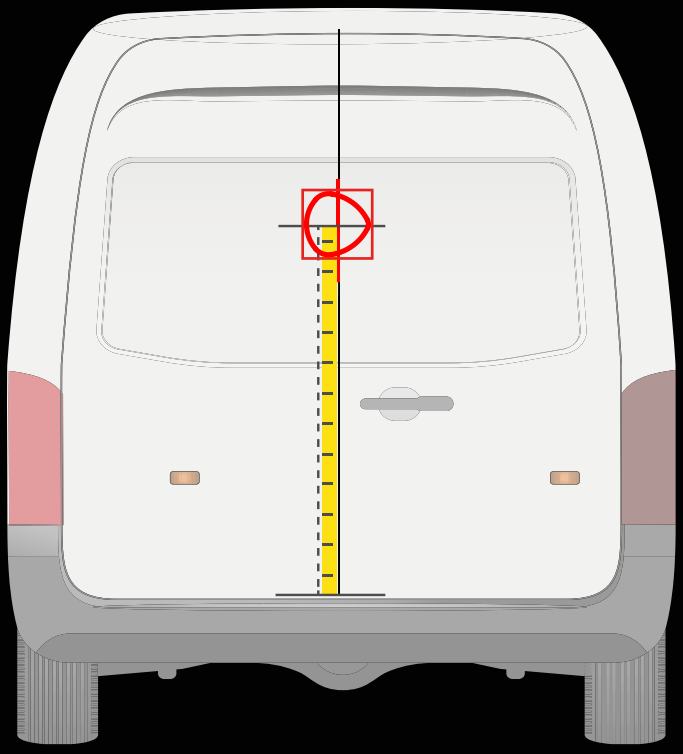

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**100 cm**

INSTALLATION ON THE LATERAL DOOR

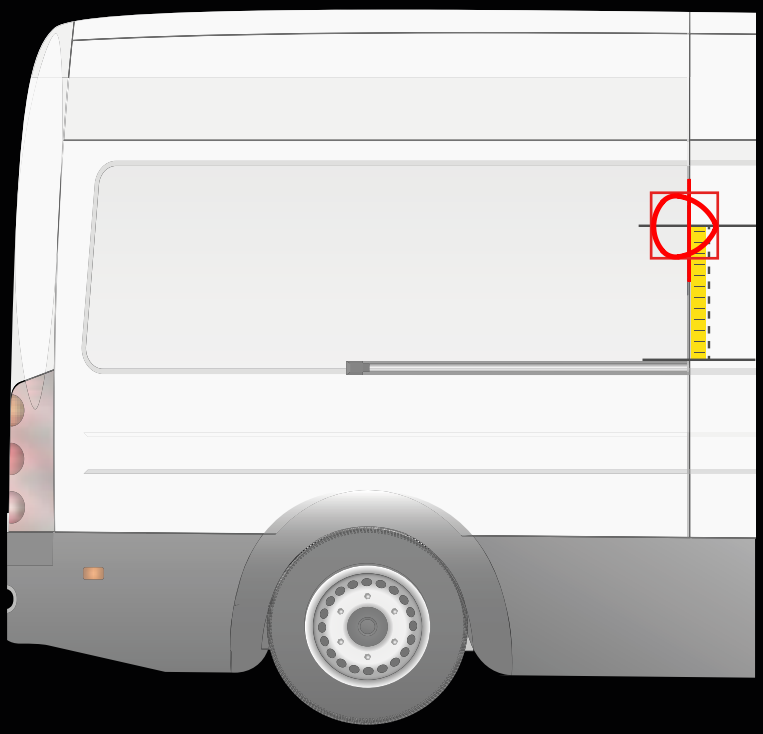

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

BLACKSTONE

FORD TRANSIT
> 2014




INSTALLATION ON THE REAR DOOR

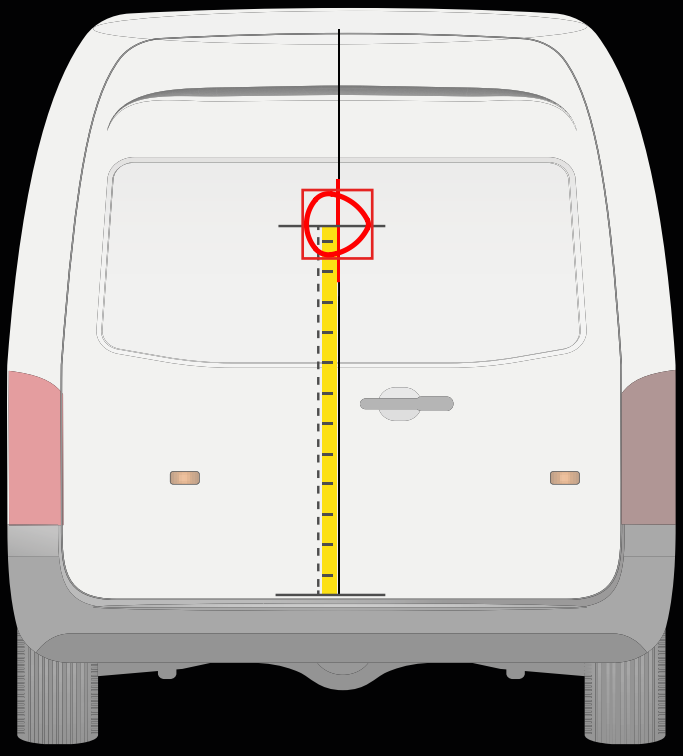

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**110 cm**

INSTALLATION ON THE LATERAL DOOR

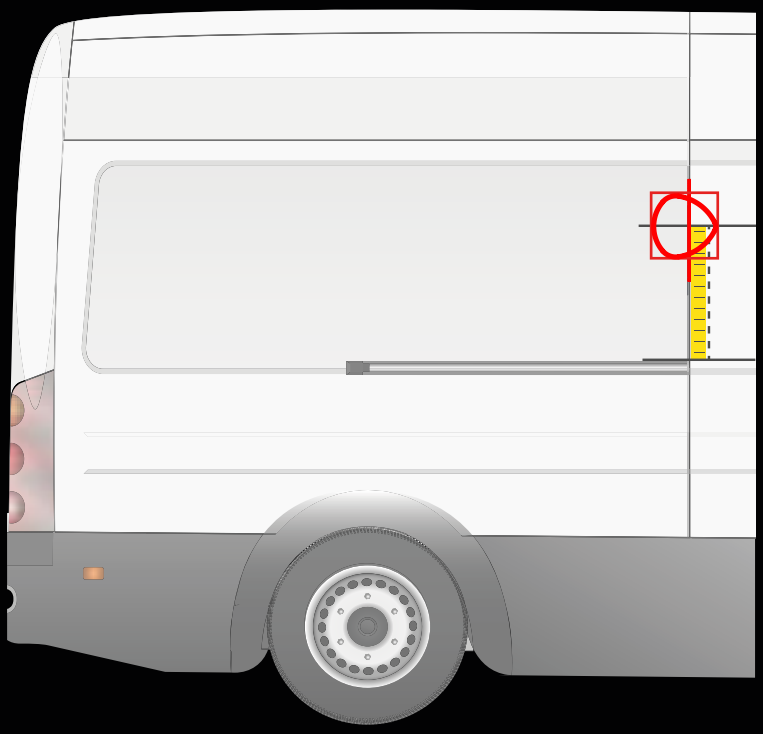

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

HYUNDAI

HYUNDAI H350
> 2016




INSTALLATION ON THE REAR DOOR

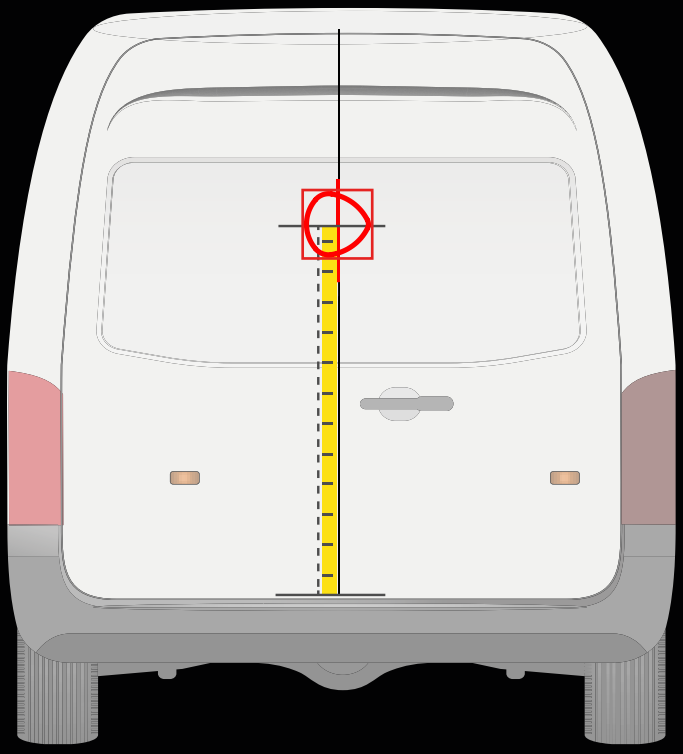

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**101 cm**

INSTALLATION ON THE LATERAL DOOR

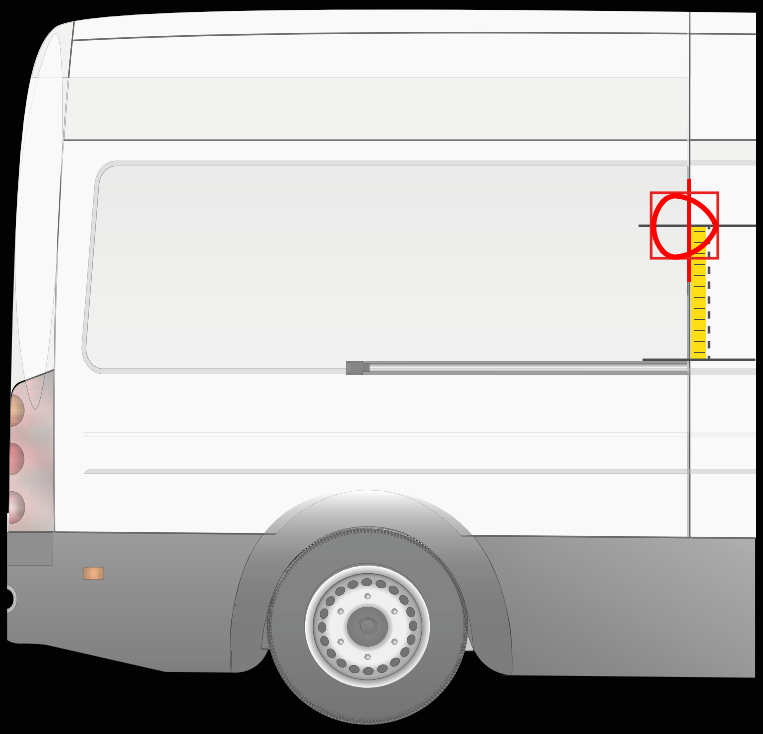

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**25 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

IVECO DAILY
> 2015

IVECO




INSTALLATION ON THE REAR DOOR

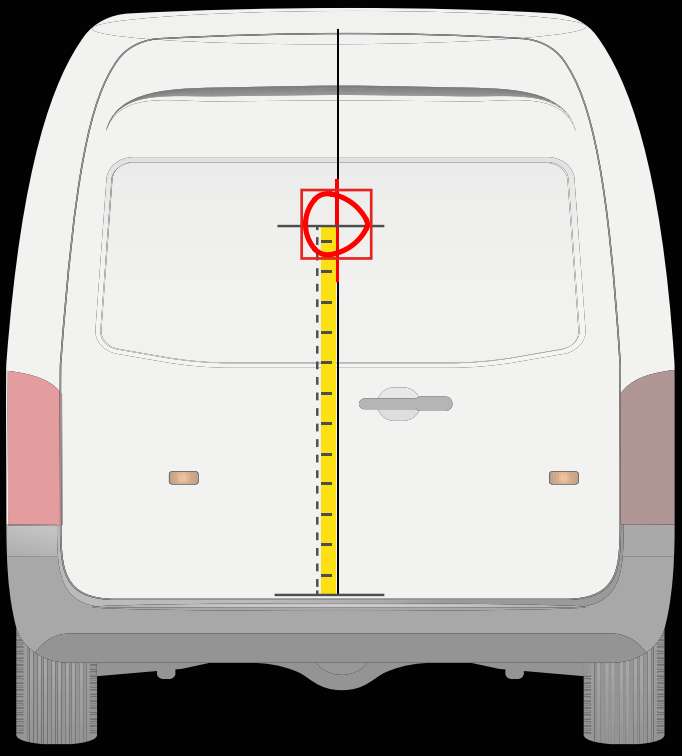

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**80 cm**

INSTALLATION ON THE LATERAL DOOR

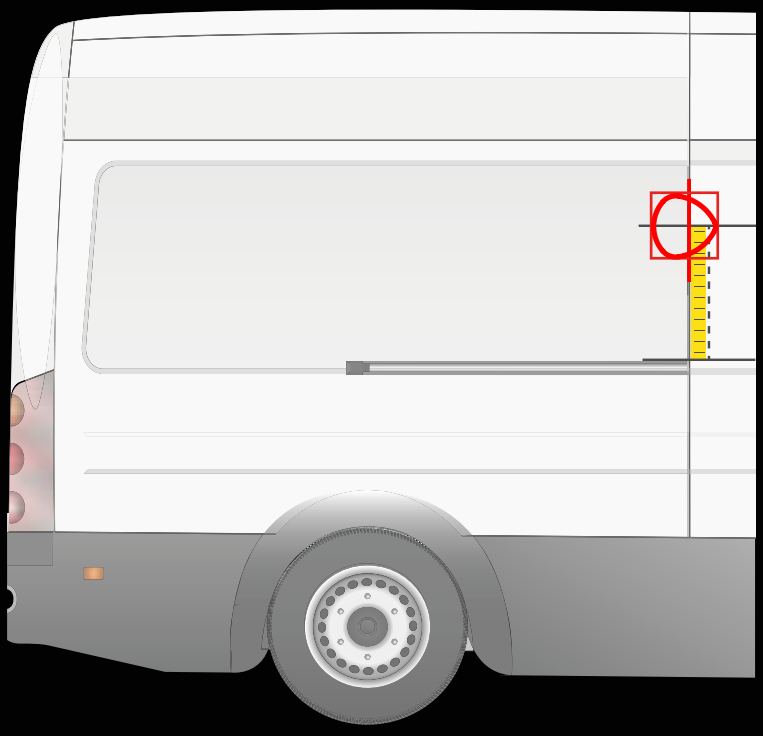

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

MAN

MAN TGE
> 2017




INSTALLATION ON THE REAR DOOR

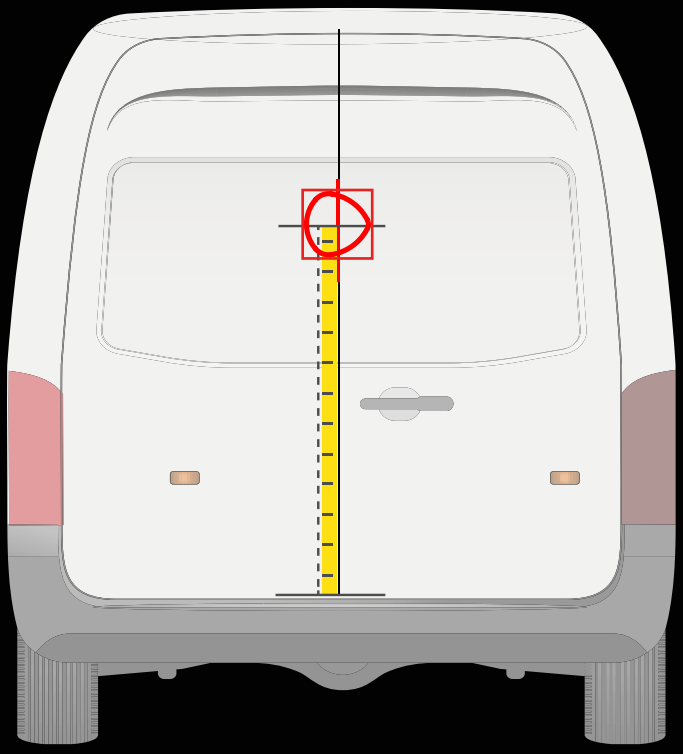

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**140 cm**

INSTALLATION ON THE LATERAL DOOR

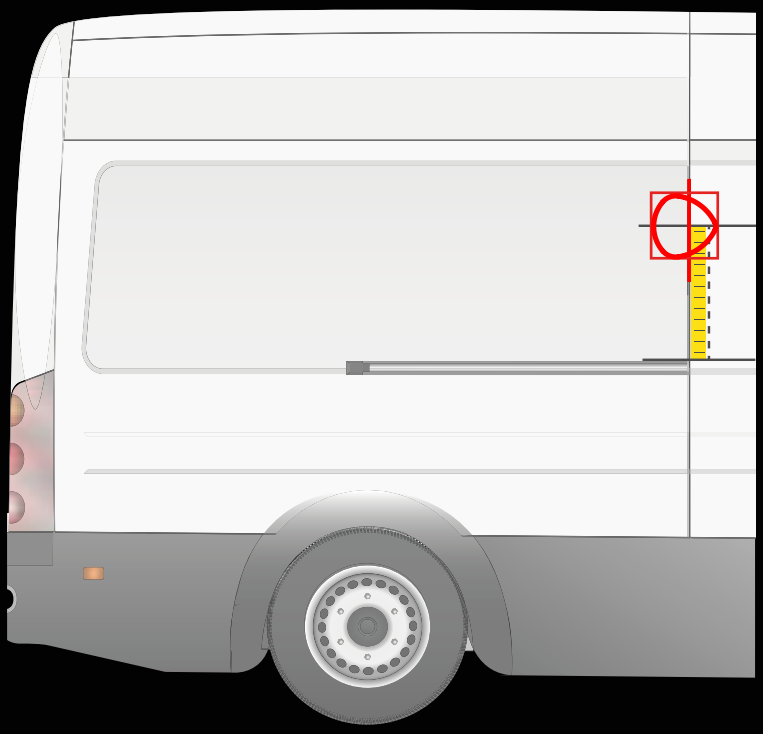

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

MAXUS

MAXUS EDELIVER 3 > 2018




INSTALLATION ON THE REAR DOOR

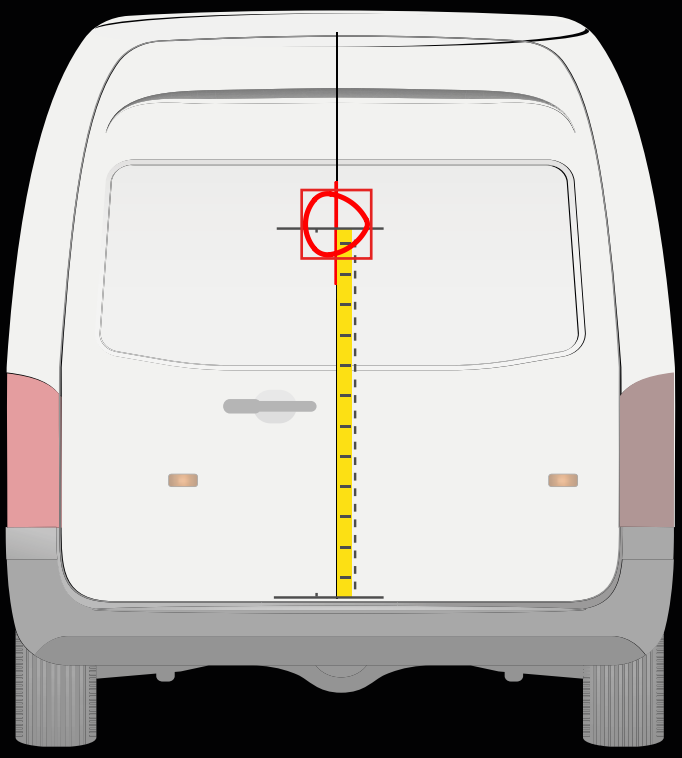

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**83 cm**

INSTALLATION ON THE LATERAL DOOR

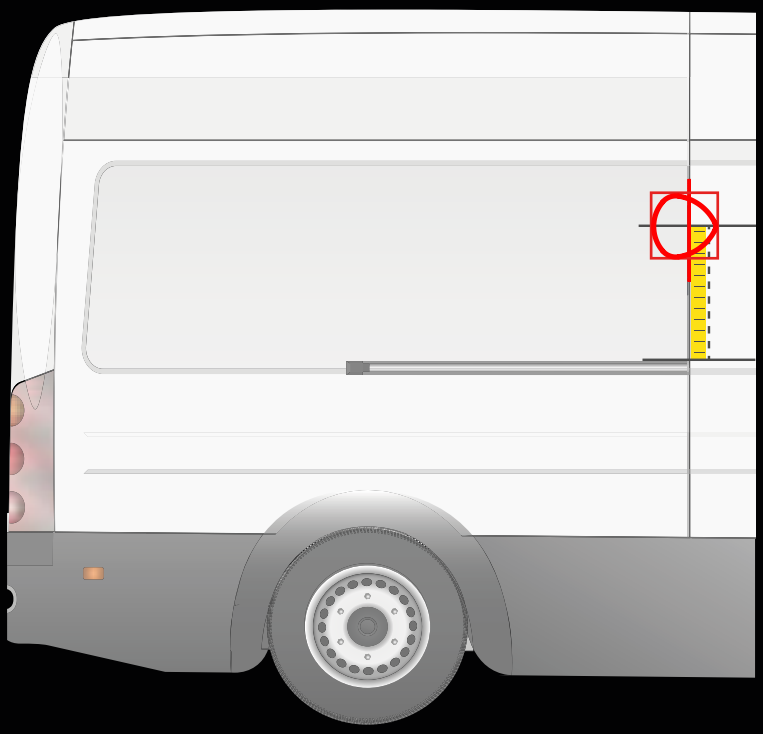

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**27 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

MAXUS

MAXUS EDELIVER 9 > 2019




INSTALLATION ON THE REAR DOOR

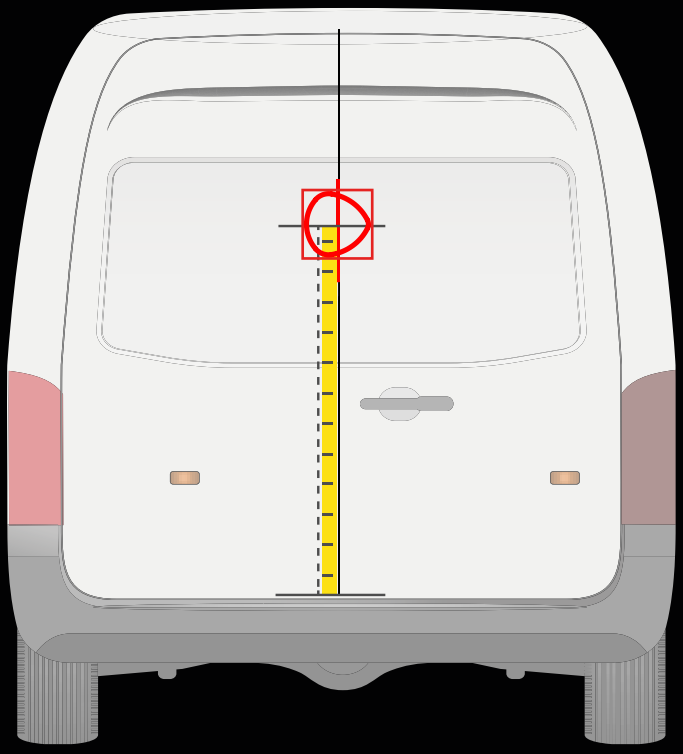

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**110 cm**

INSTALLATION ON THE LATERAL DOOR

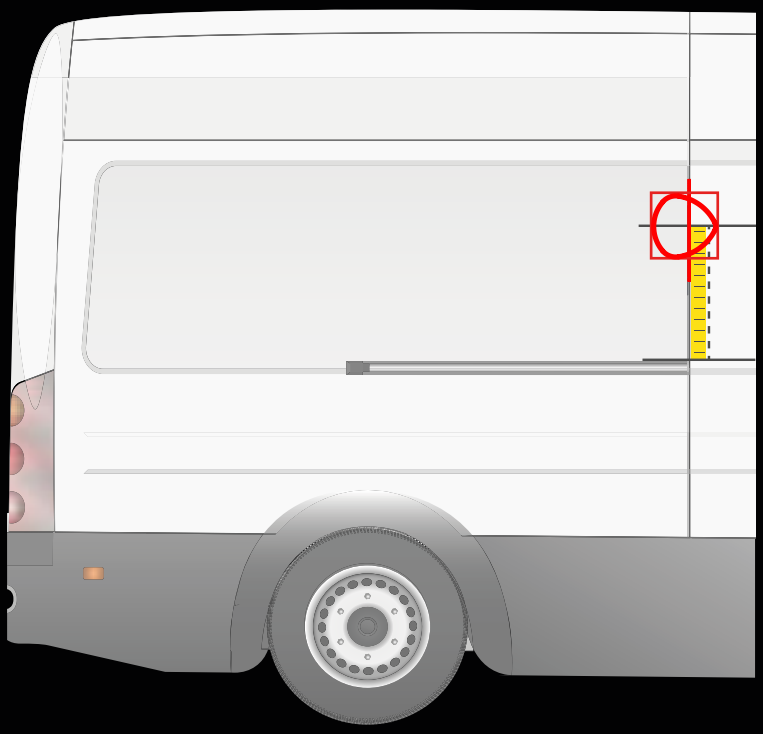

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**18 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

Mercedes-Benz

MERCEDES CITAN <= 2021




INSTALLATION ON THE REAR DOOR

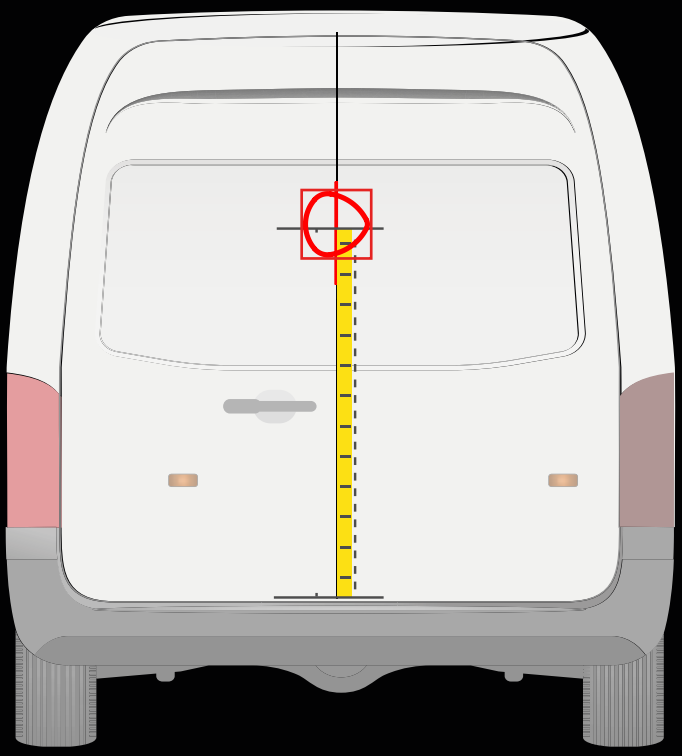

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**75 cm**

INSTALLATION ON THE LATERAL DOOR

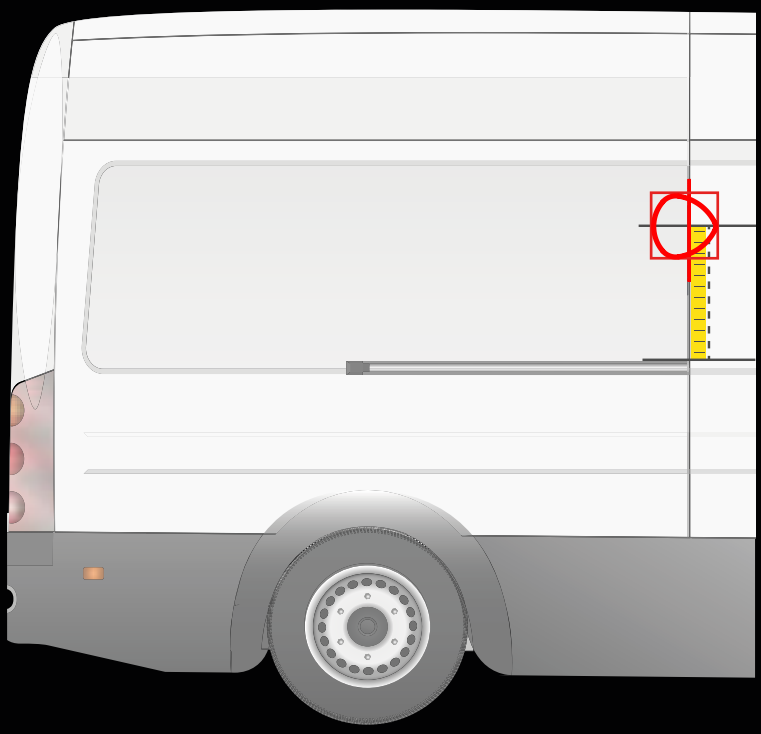

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**24 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

For the "**Short**" version of the van we recommend using additional fixing plates. Reference **89530017**.


BLACKSTONE

Mercedes-Benz

MERCEDES CITAN > 2021




INSTALLATION ON THE REAR DOOR

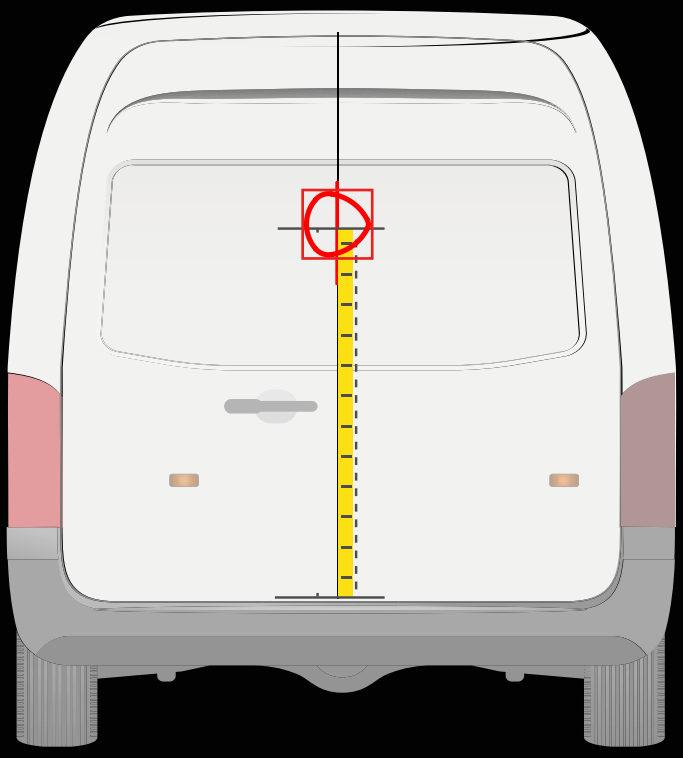

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**75 cm**

INSTALLATION ON THE LATERAL DOOR

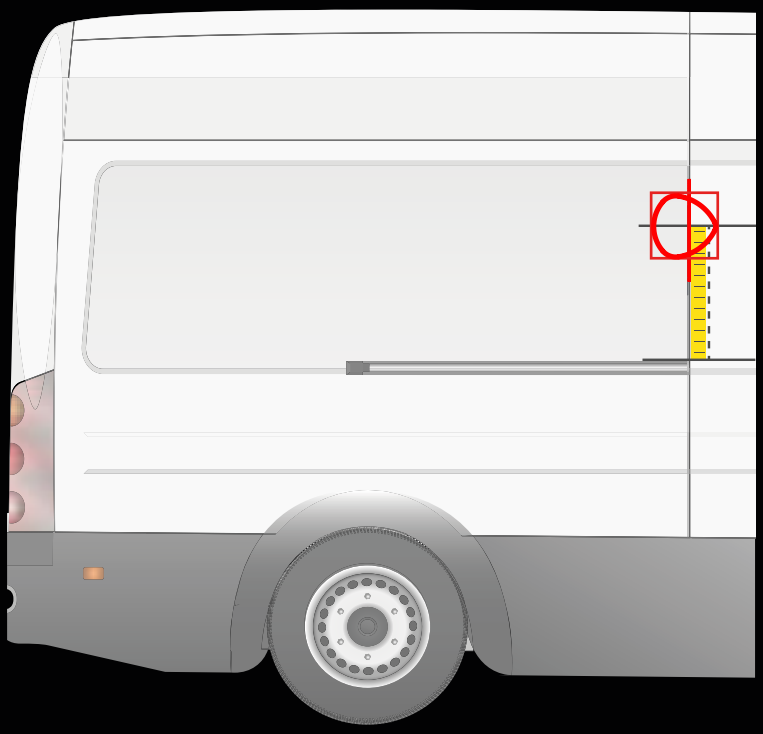

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**24 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

Mercedes-Benz

MERCEDES VITO > 2014




INSTALLATION ON THE REAR DOOR

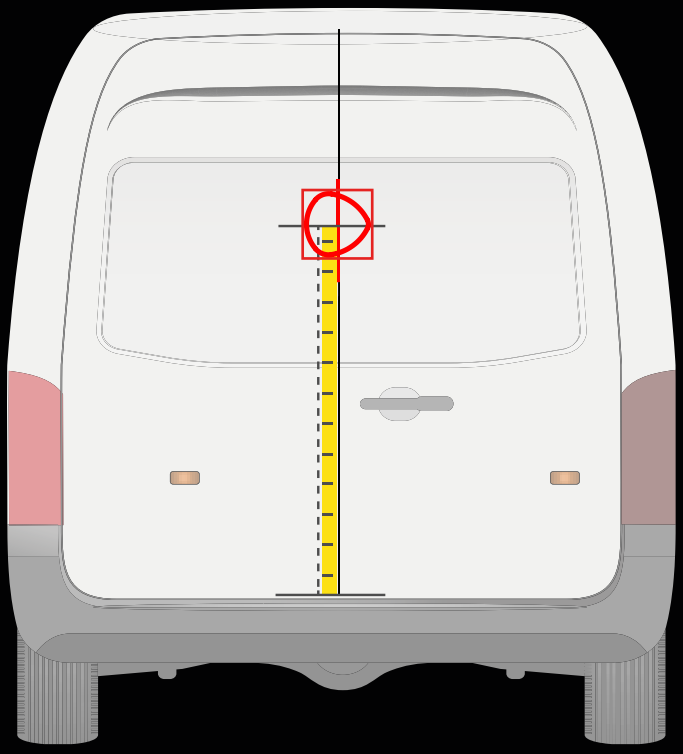

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**90 cm**

INSTALLATION ON THE LATERAL DOOR

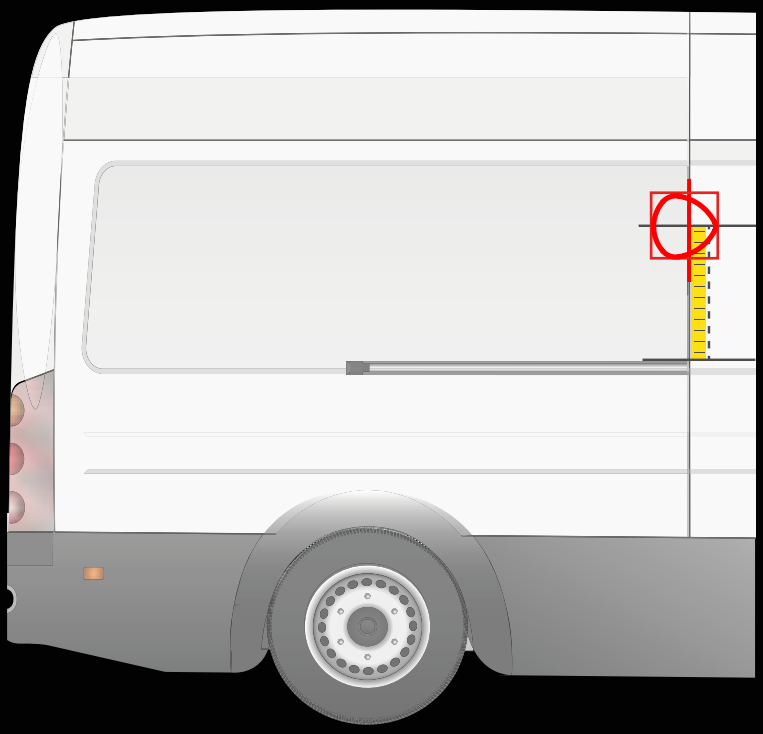

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**35 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

Mercedes-Benz

MERCEDES SPRINTER > 2018




INSTALLATION ON THE REAR DOOR

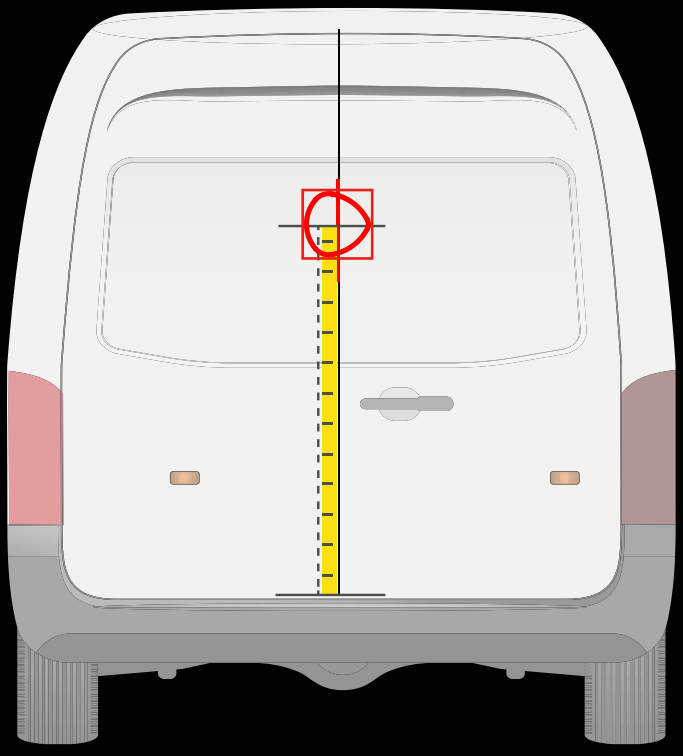

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**110 cm**

INSTALLATION ON THE LATERAL DOOR

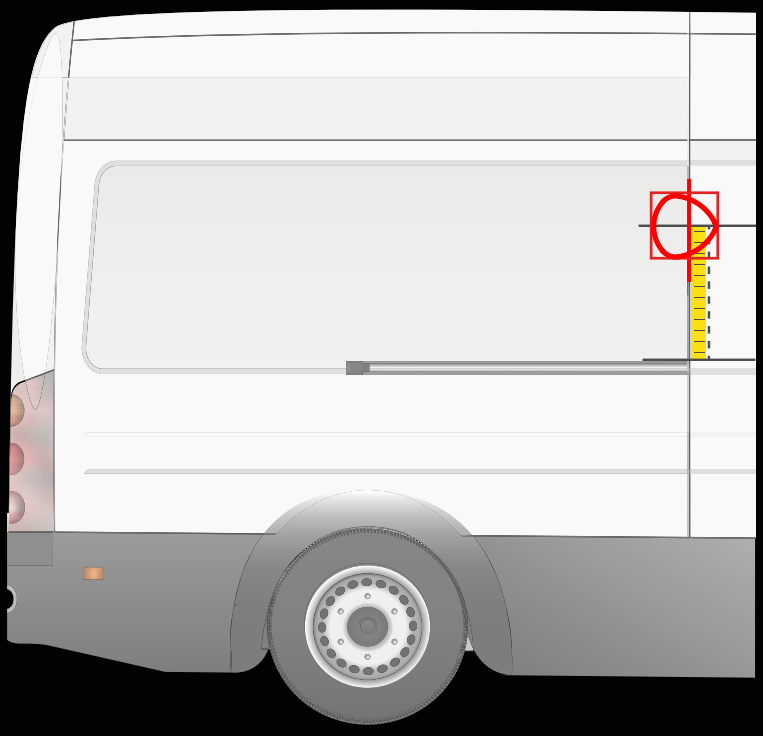

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

NISSAN

NISSAN E-NV 200
2014 - 2021




INSTALLATION ON THE REAR DOOR

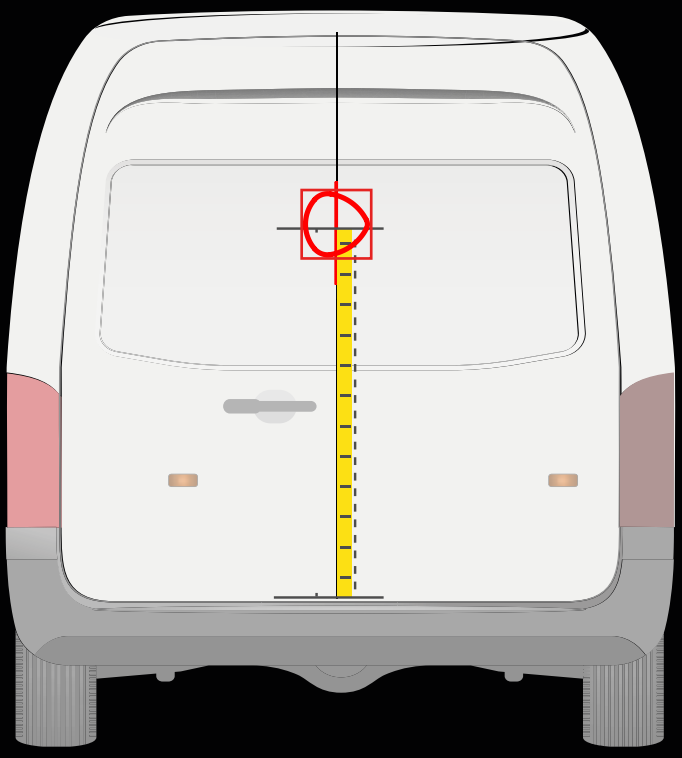

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**93 cm**

INSTALLATION ON THE LATERAL DOOR

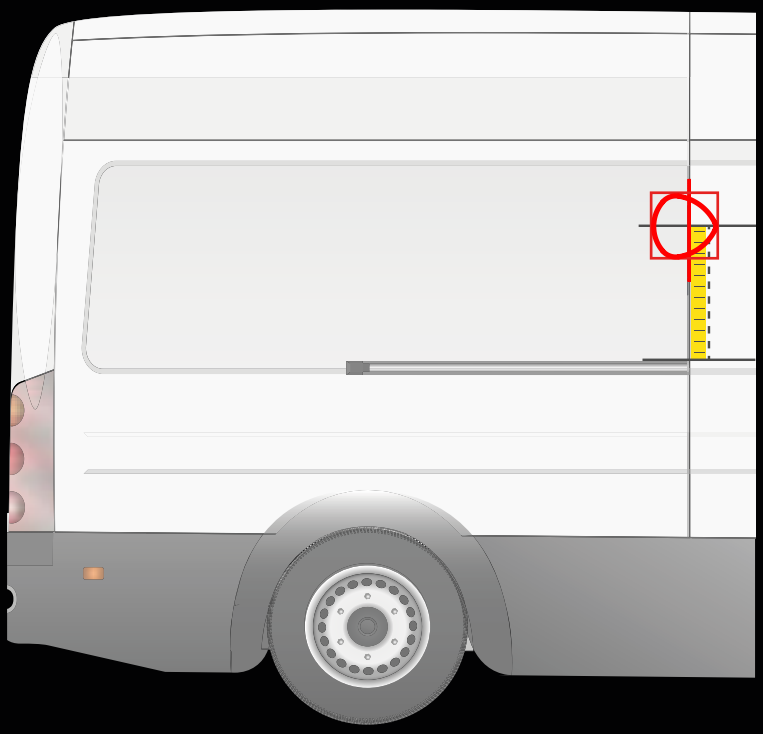

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**49 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

NISSAN

NISSAN NV 250
2019 - 2021




INSTALLATION ON THE REAR DOOR

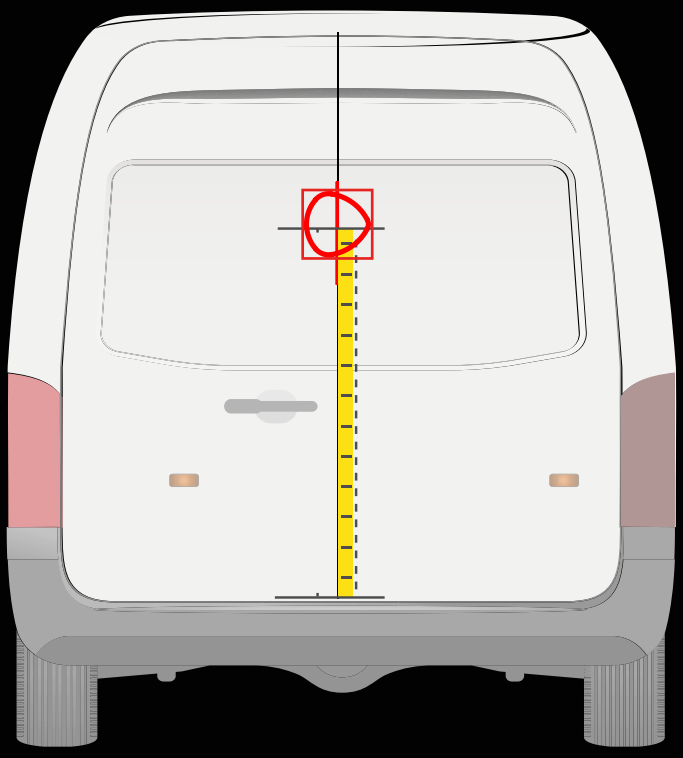

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**72 cm**

INSTALLATION ON THE LATERAL DOOR

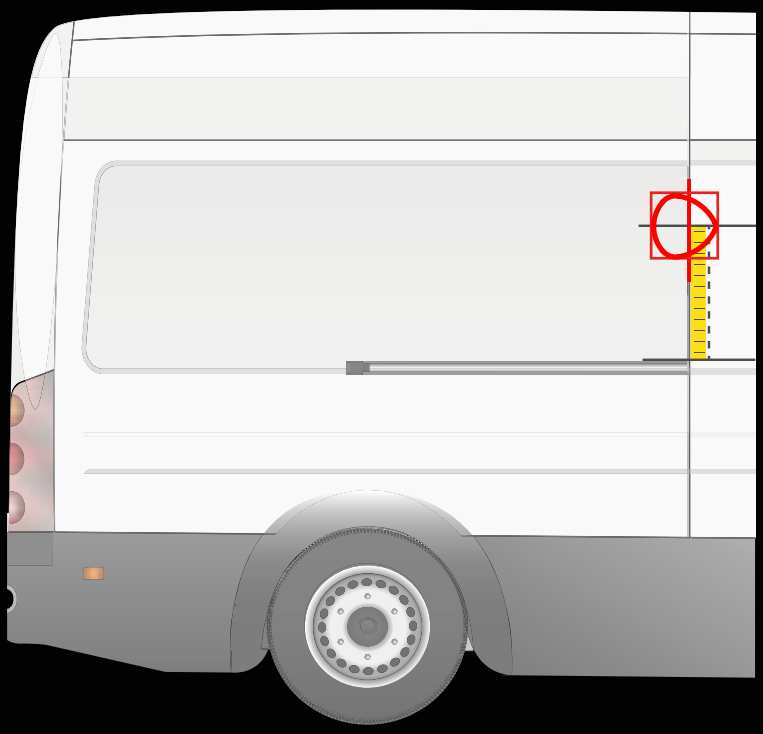

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**22,5 cm**

The above height recommendations are a guide, other mounting heights are possible.
Choose a flat area on the door that does not cause interference.

For the "**Short**" version of the van we recommend using additional fixing plates. Reference **89530017**.


BLACKSTONE

NISSAN

NISSAN TOWNSTAR VAN
> 2021




INSTALLATION ON THE REAR DOOR

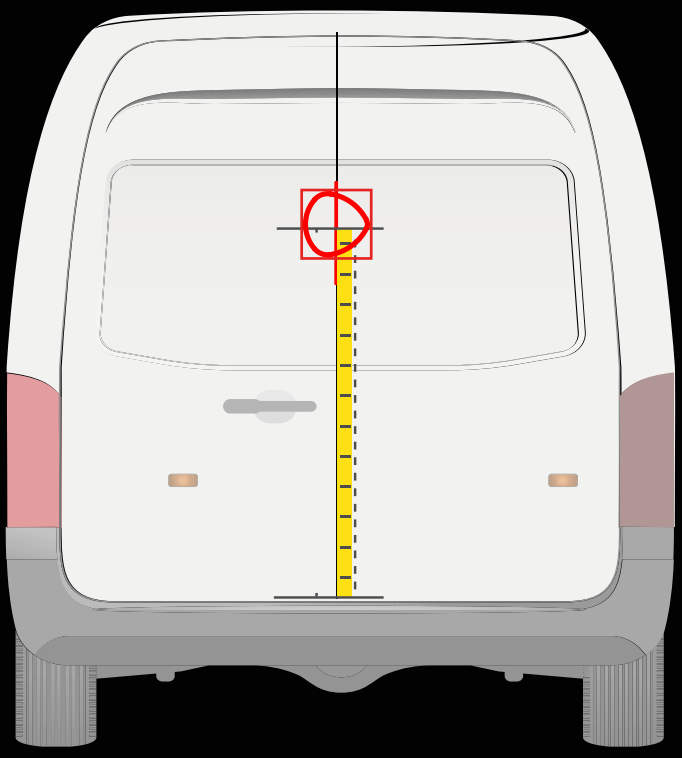

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**75 cm**

INSTALLATION ON THE LATERAL DOOR

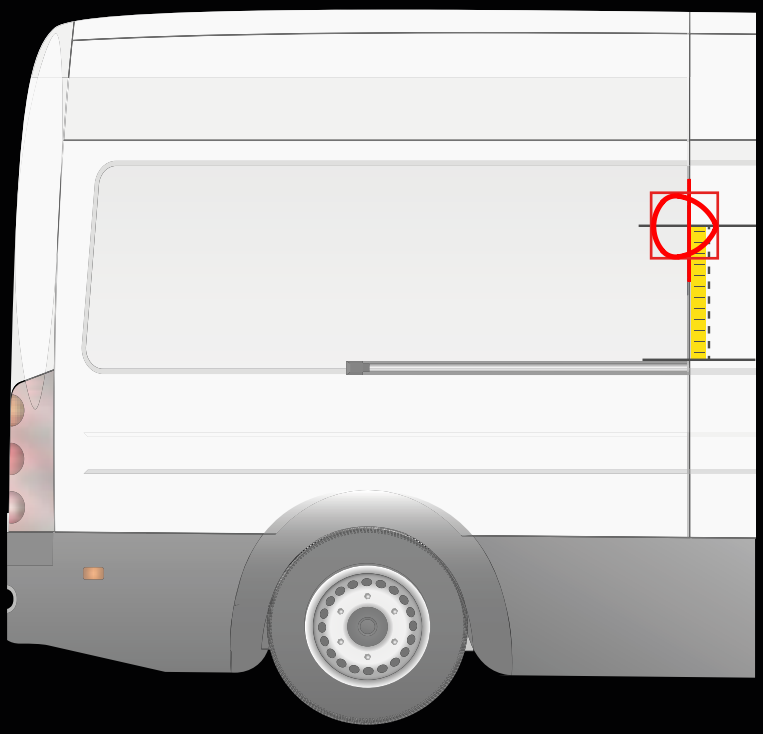

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**24 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

NISSAN

NISSAN PRIMASTAR
> 2022




INSTALLATION ON THE REAR DOOR

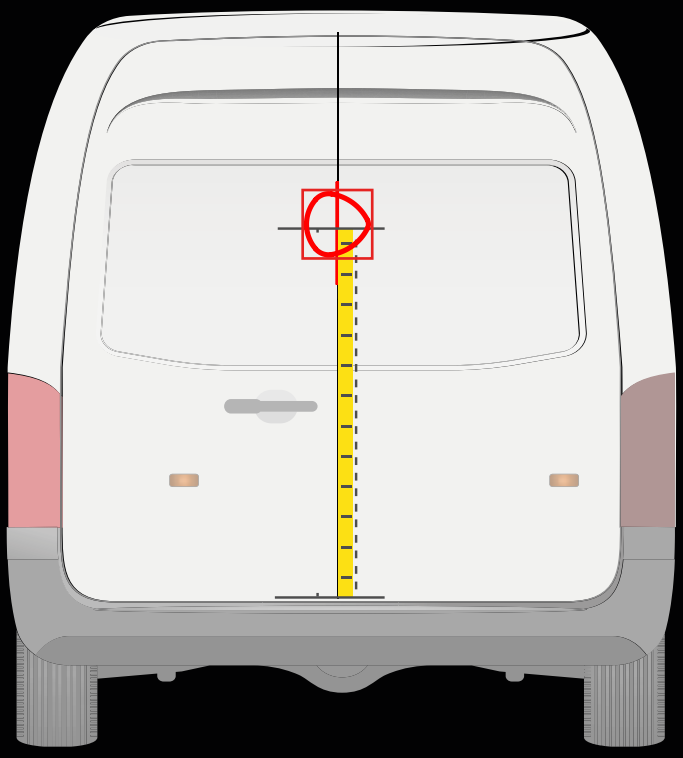

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**84 cm**

INSTALLATION ON THE LATERAL DOOR

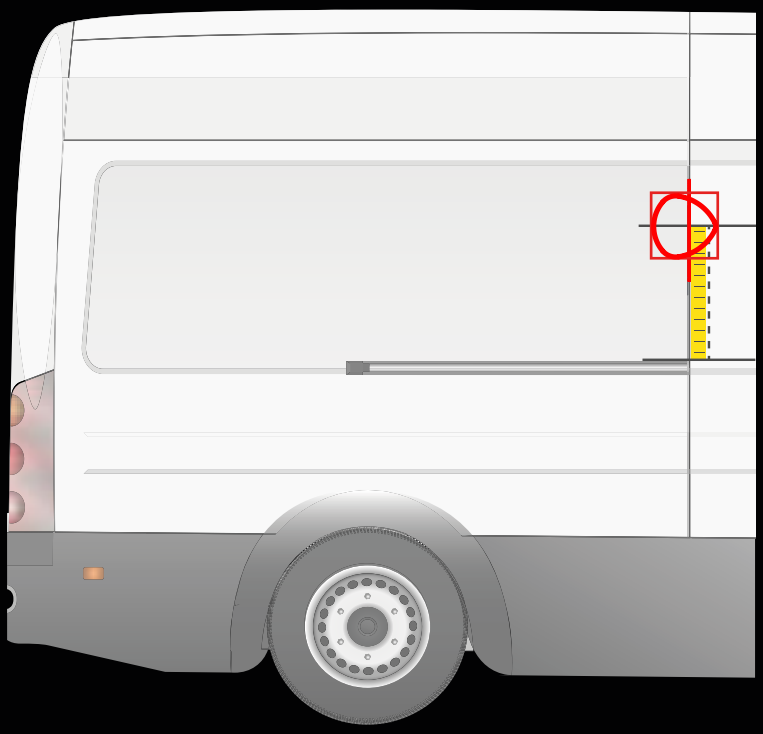

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

NISSAN

NISSAN INTERSTAR > 2022




INSTALLATION ON THE REAR DOOR

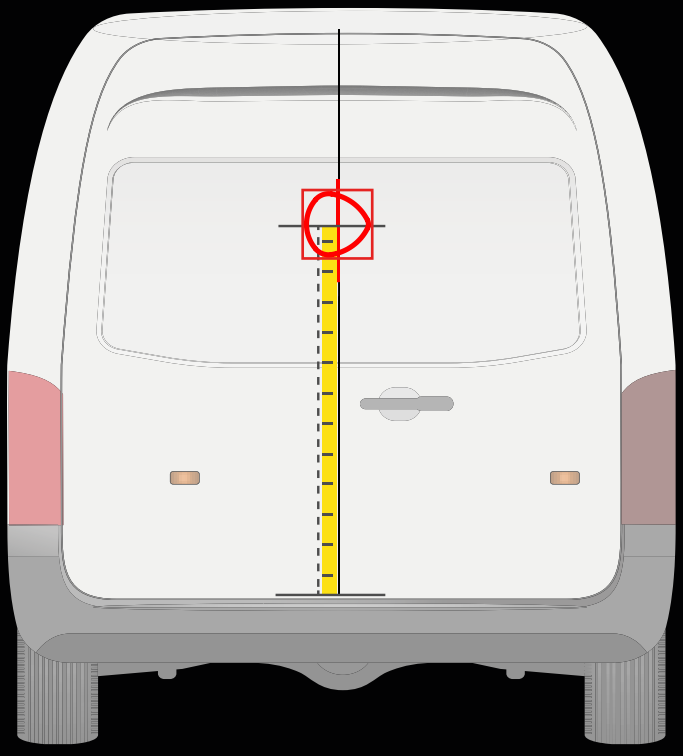

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**110 cm**

INSTALLATION ON THE LATERAL DOOR

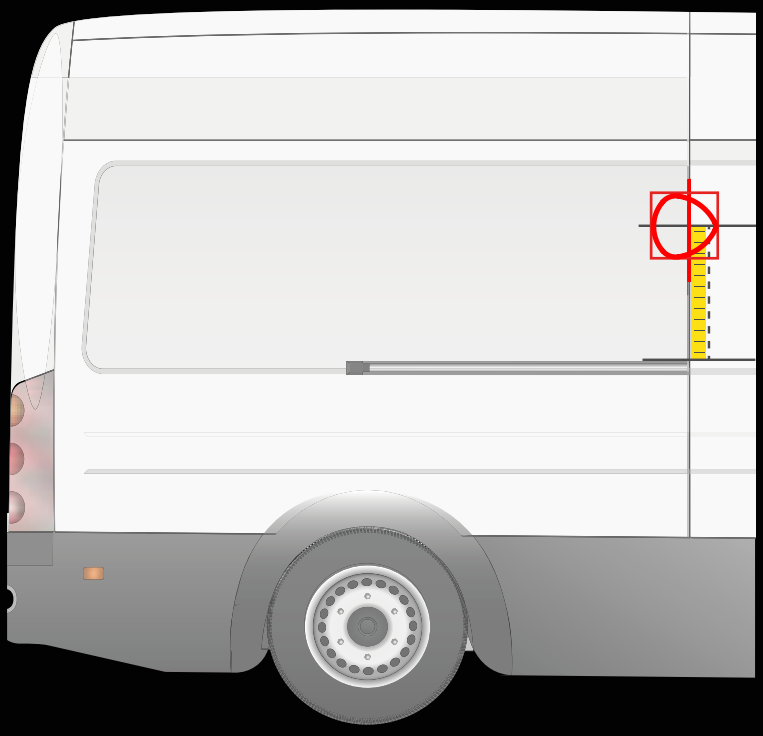

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

OPEL

OPEL COMBO > 2018




INSTALLATION ON THE REAR DOOR

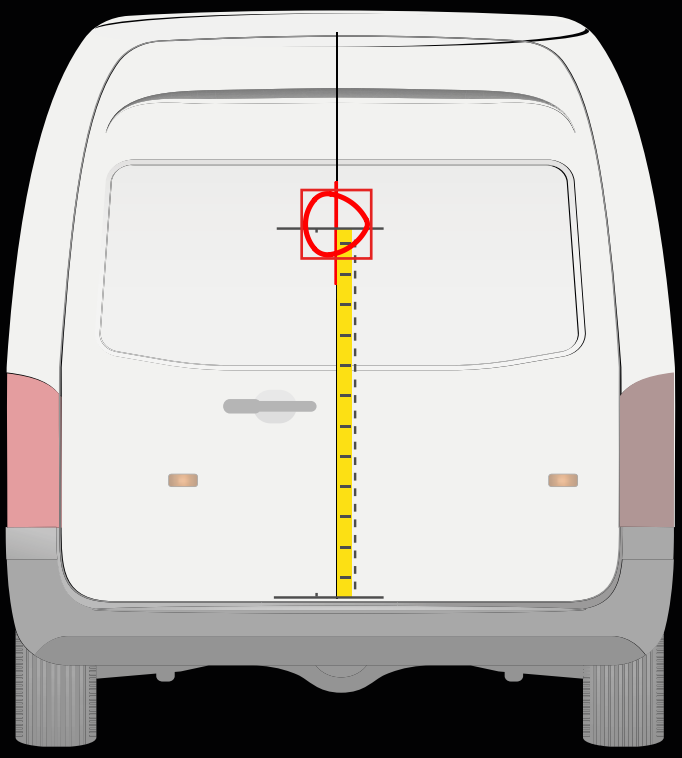

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**80 cm**

INSTALLATION ON THE LATERAL DOOR

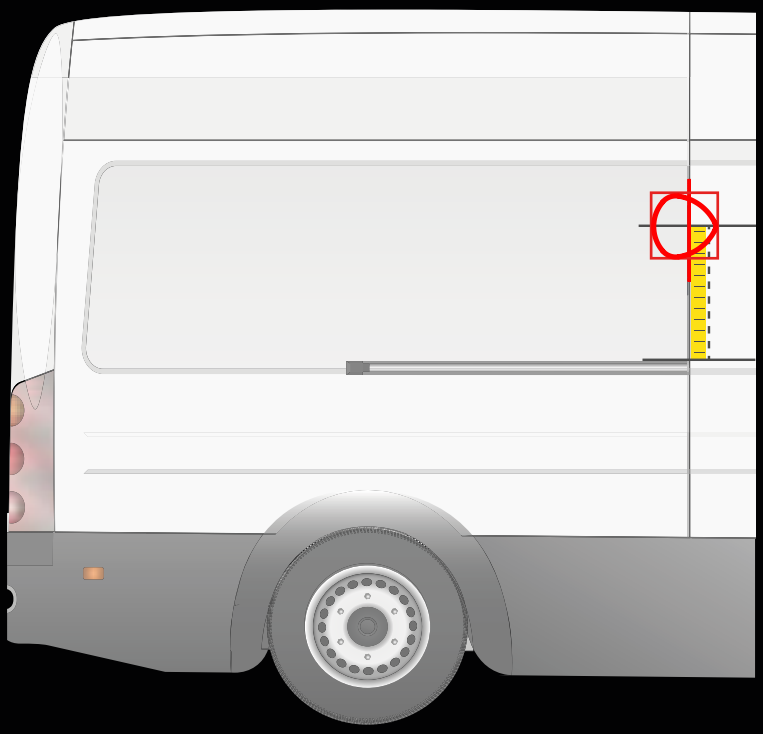

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**25 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

OPEL

OPEL VIVARO B
2014 - 2019




INSTALLATION ON THE REAR DOOR

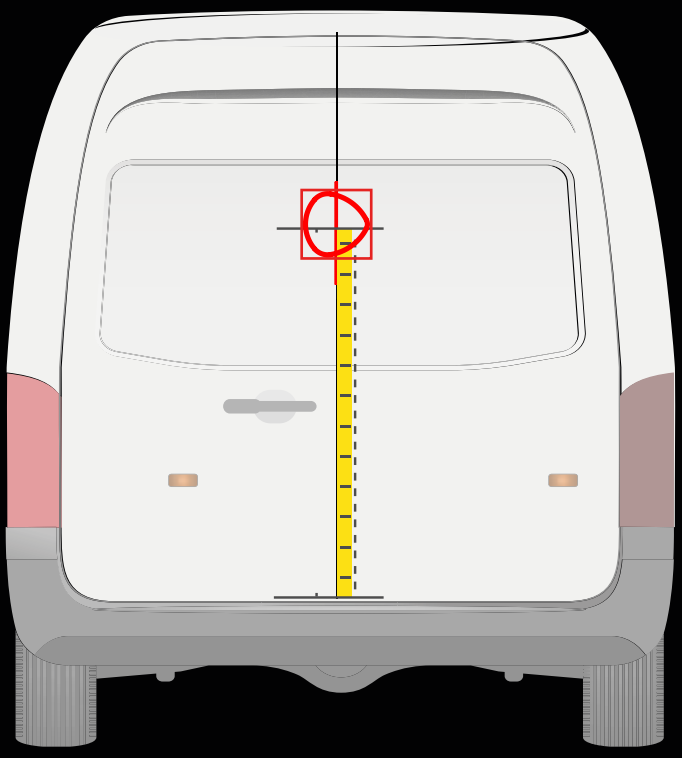

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**95 cm**

INSTALLATION ON THE LATERAL DOOR

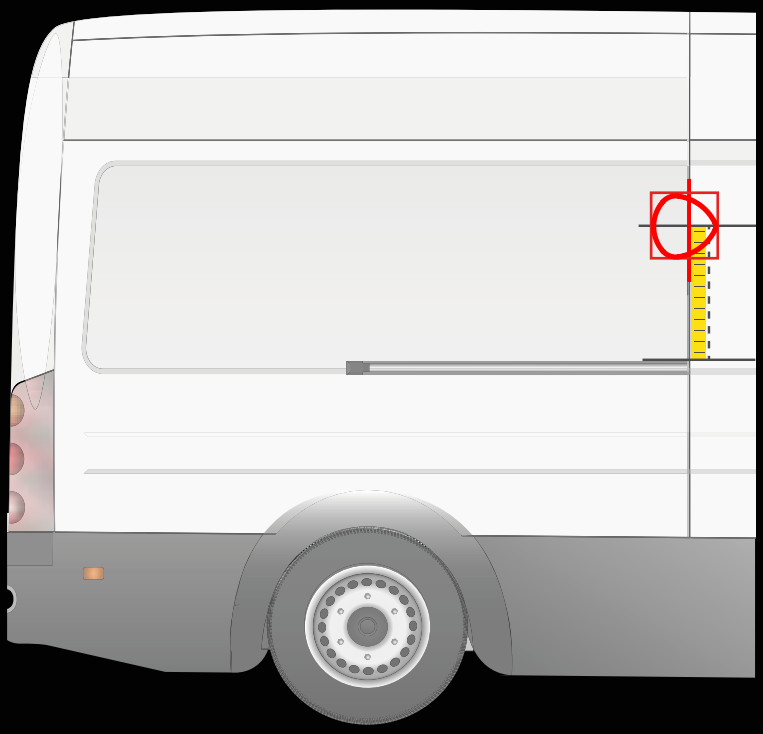

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

OPEL

OPEL VIVARO C
> 2019




INSTALLATION ON THE REAR DOOR

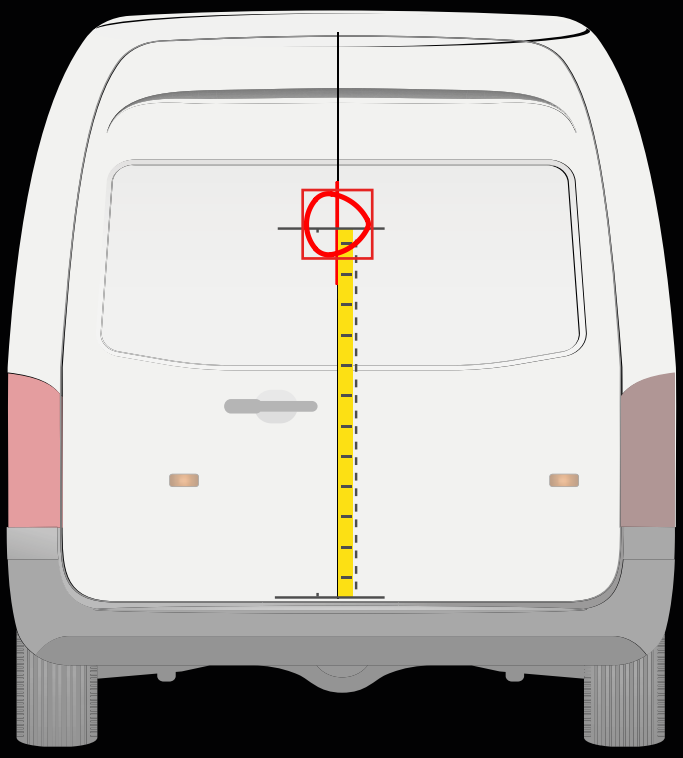

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**95 cm**

INSTALLATION ON THE LATERAL DOOR

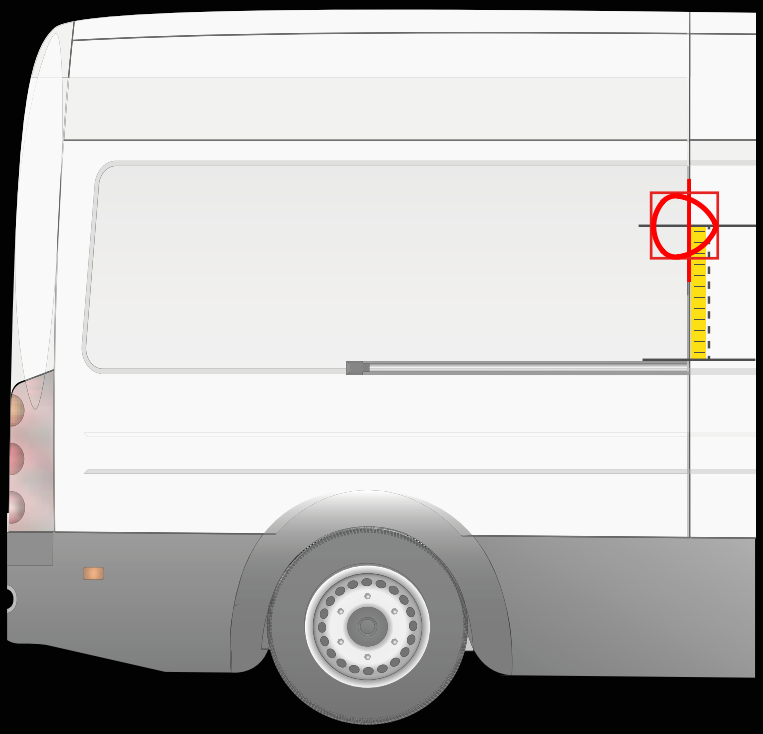

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

OPEL

OPEL MOVANO
> 2022




INSTALLATION ON THE REAR DOOR

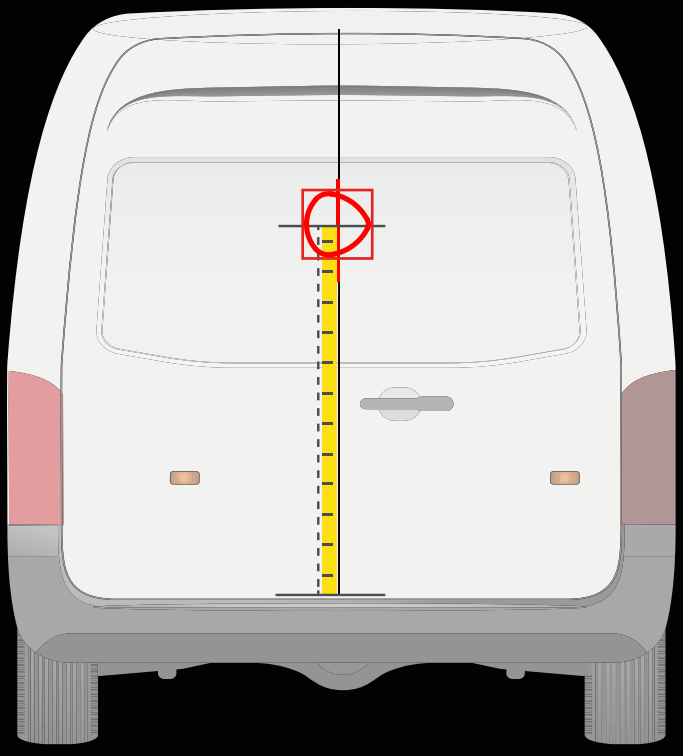

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**112 cm**

INSTALLATION ON THE LATERAL DOOR

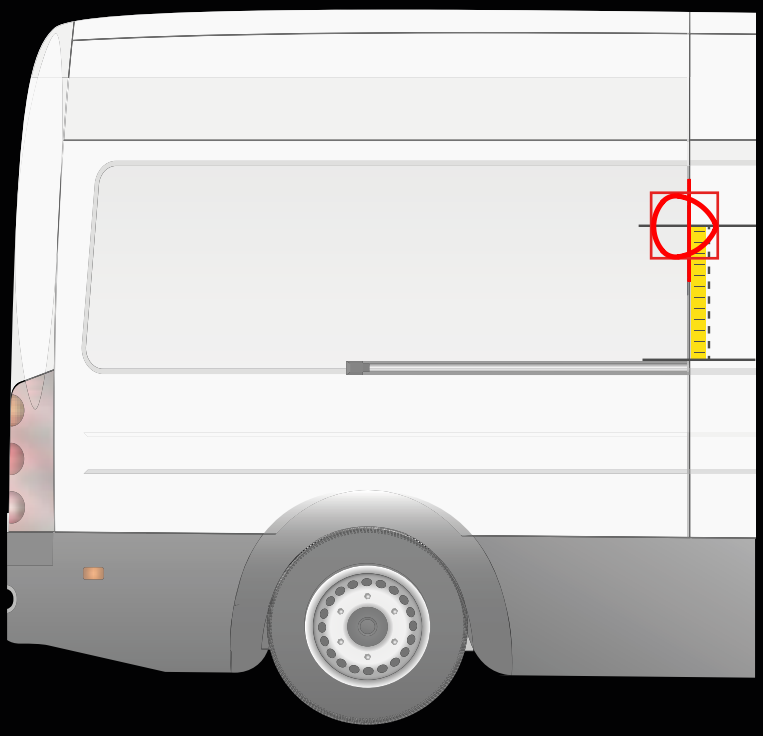

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

PEUGEOT

PEUGEOT BIPPER
2007 - 2016




INSTALLATION ON THE REAR DOOR

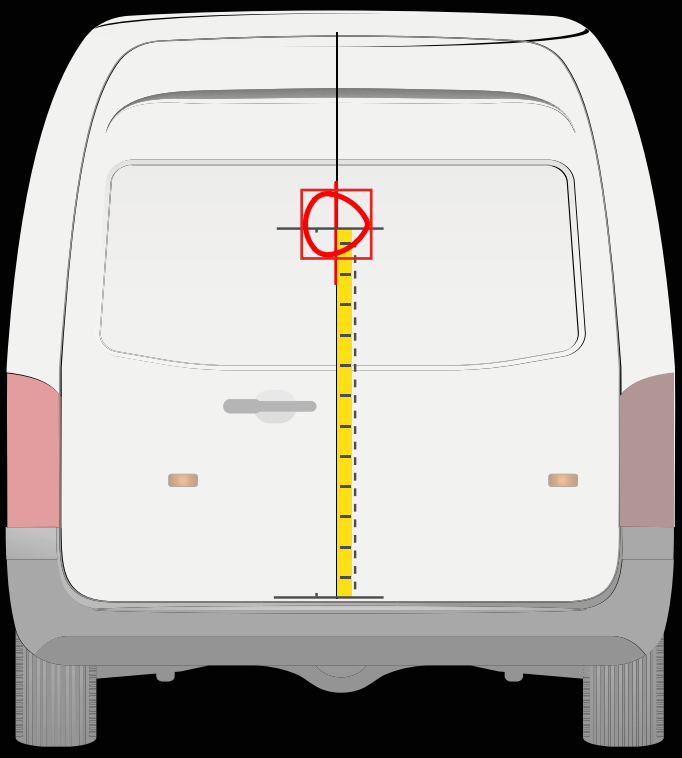

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**80 cm**

INSTALLATION ON THE LATERAL DOOR

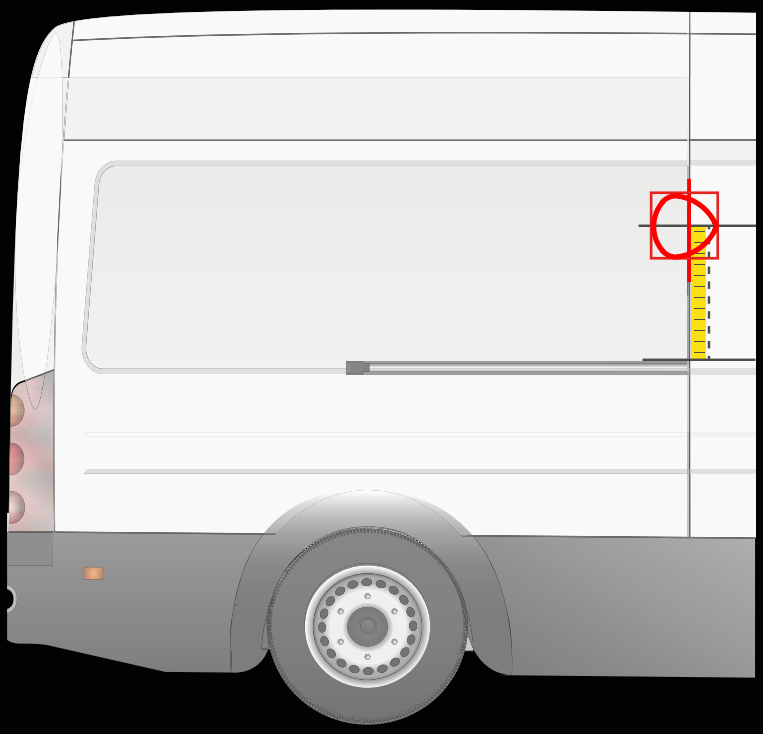

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

PEUGEOT

PEUGEOT PARTNER
> 2018




INSTALLATION ON THE REAR DOOR

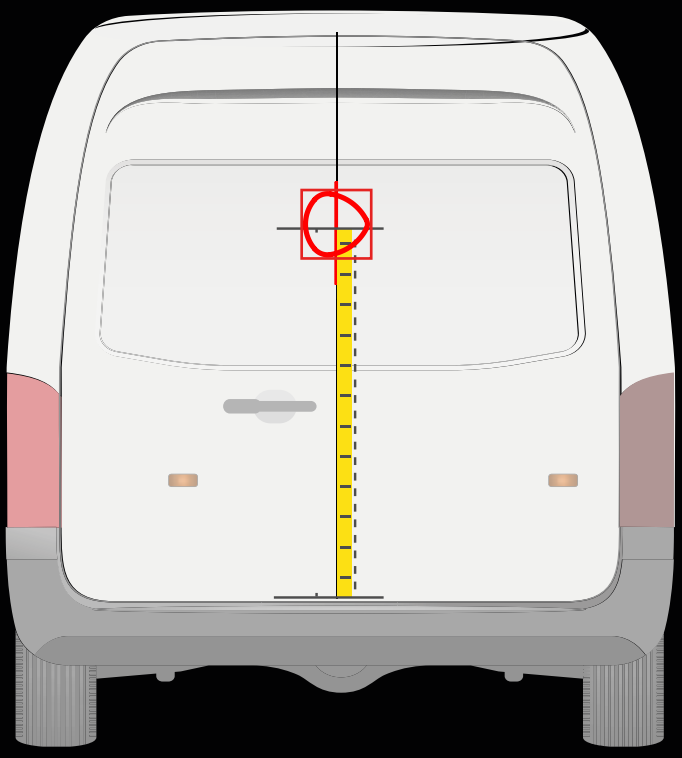

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**80 cm**

INSTALLATION ON THE LATERAL DOOR

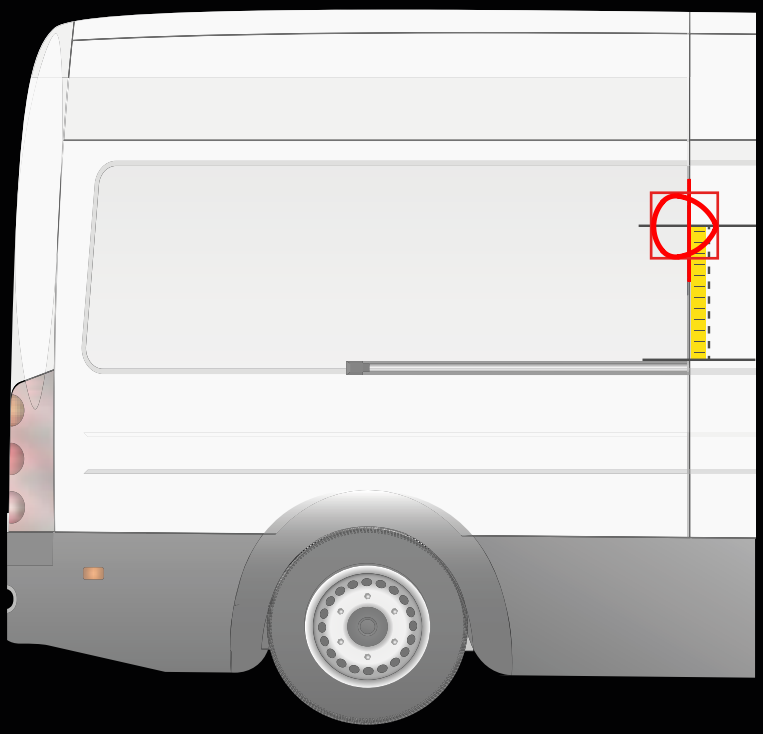

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**25 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

PEUGEOT

PEUGEOT EXPERT > 2016




INSTALLATION ON THE REAR DOOR

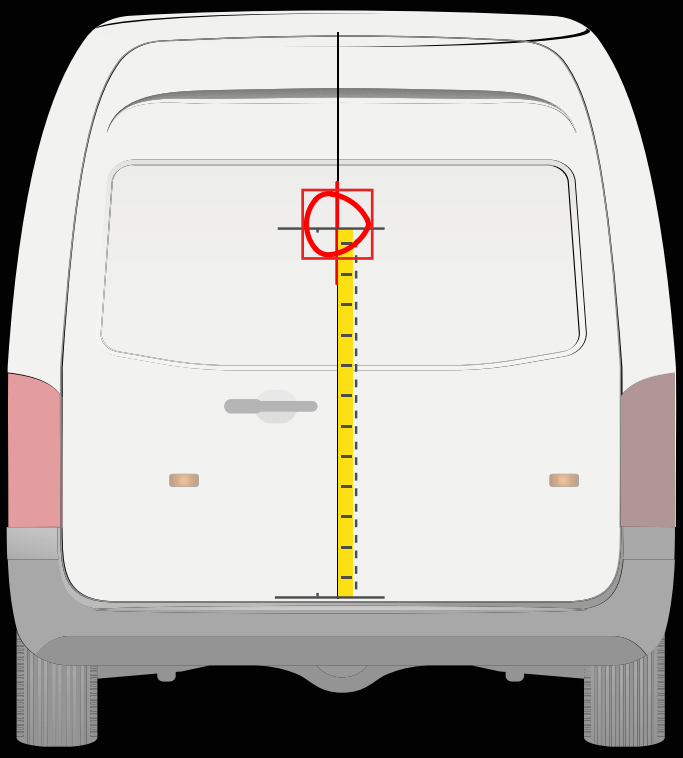

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**95 cm**

INSTALLATION ON THE LATERAL DOOR

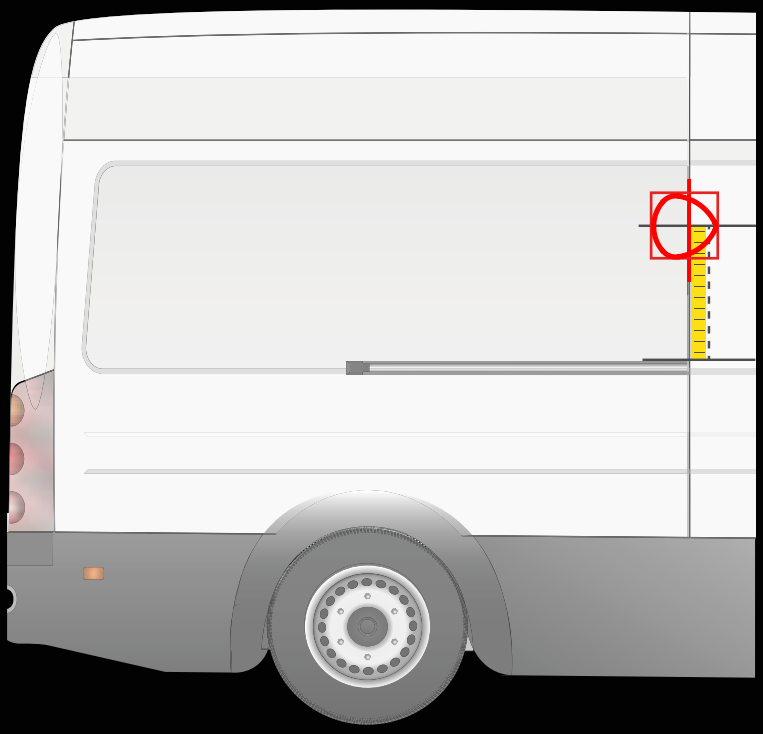

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

PEUGEOT

PEUGEOT BOXER
> 2014




INSTALLATION ON THE REAR DOOR

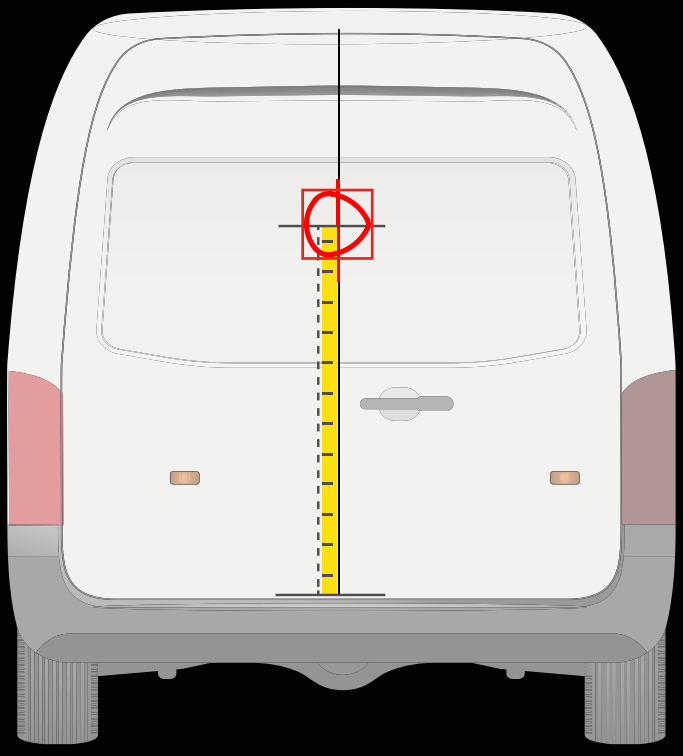

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**112 cm**

INSTALLATION ON THE LATERAL DOOR

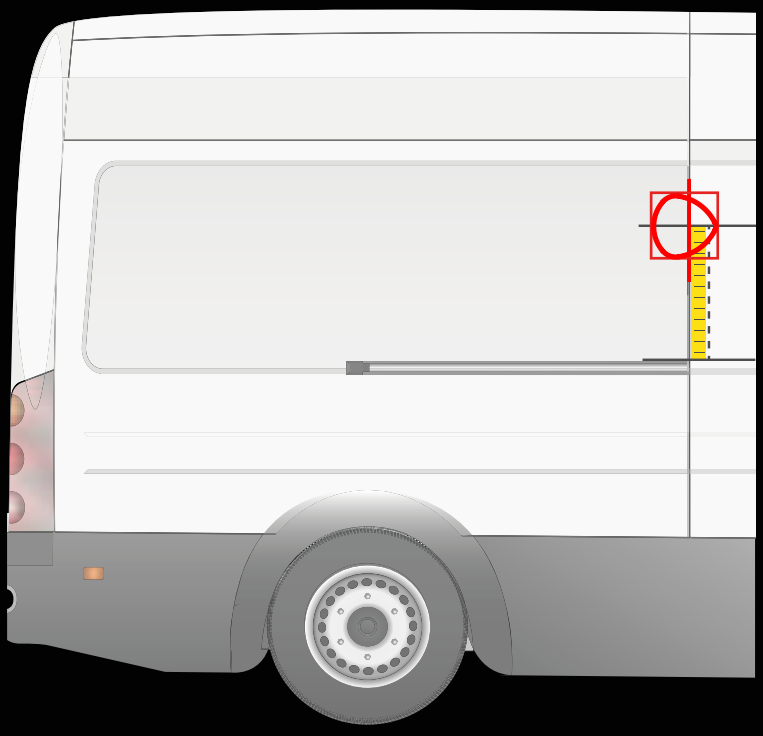

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

BLACKSTONE

RENAULT KANGOO
2008 - 2021




INSTALLATION ON THE REAR DOOR

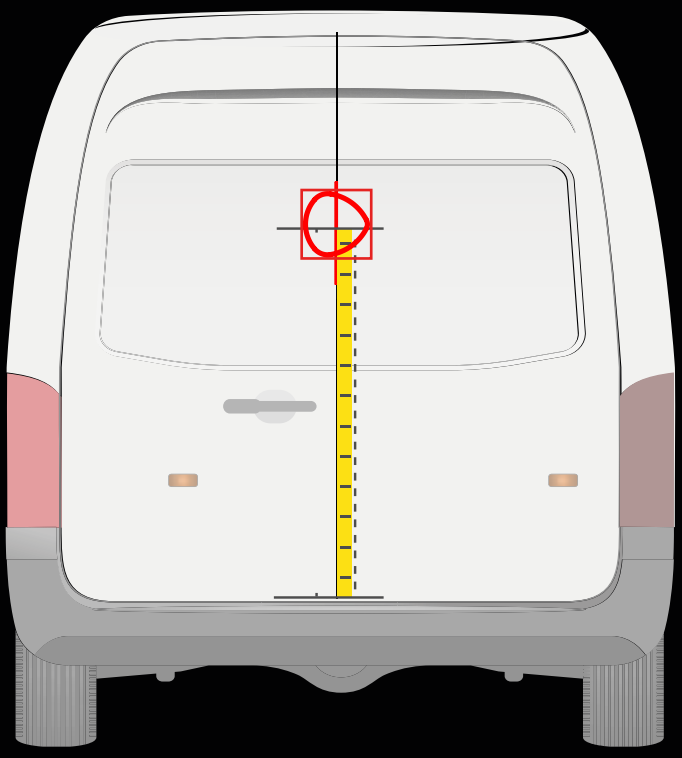

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**72 cm**

INSTALLATION ON THE LATERAL DOOR

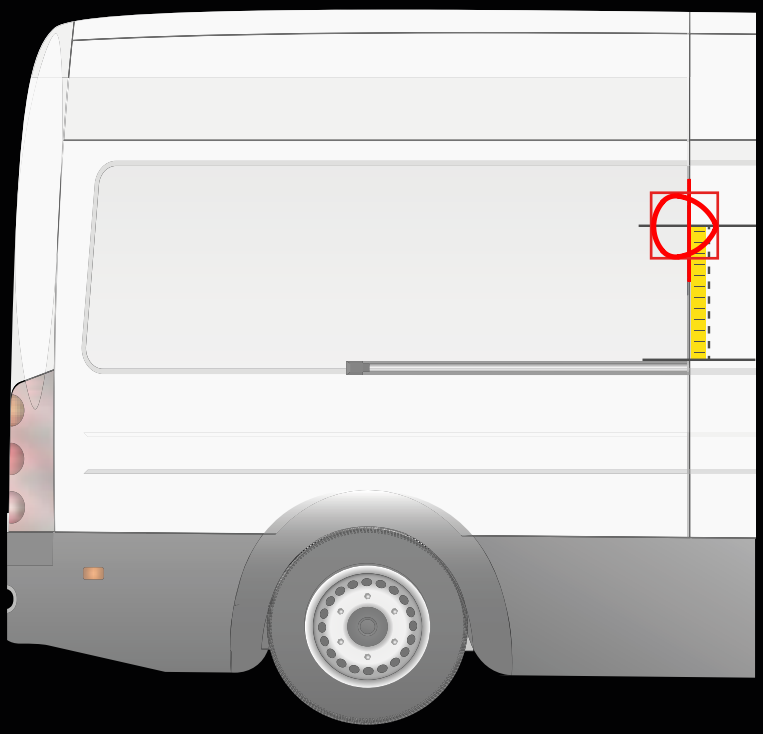

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**22,5 cm**

The above height recommendations are a guide, other mounting heights are possible.
Choose a flat area on the door that does not cause interference.


For the "**Short**" version of the van we recommend using additional fixing plates. Reference **89530017**.

BLACKSTONE

RENAULT KANGOO VAN > 2021




INSTALLATION ON THE REAR DOOR

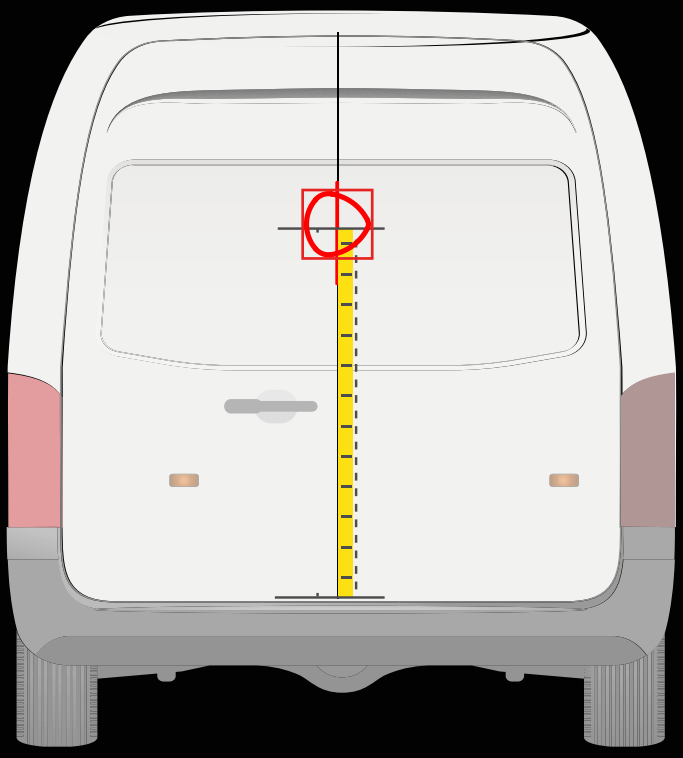

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**75 cm**

INSTALLATION ON THE LATERAL DOOR

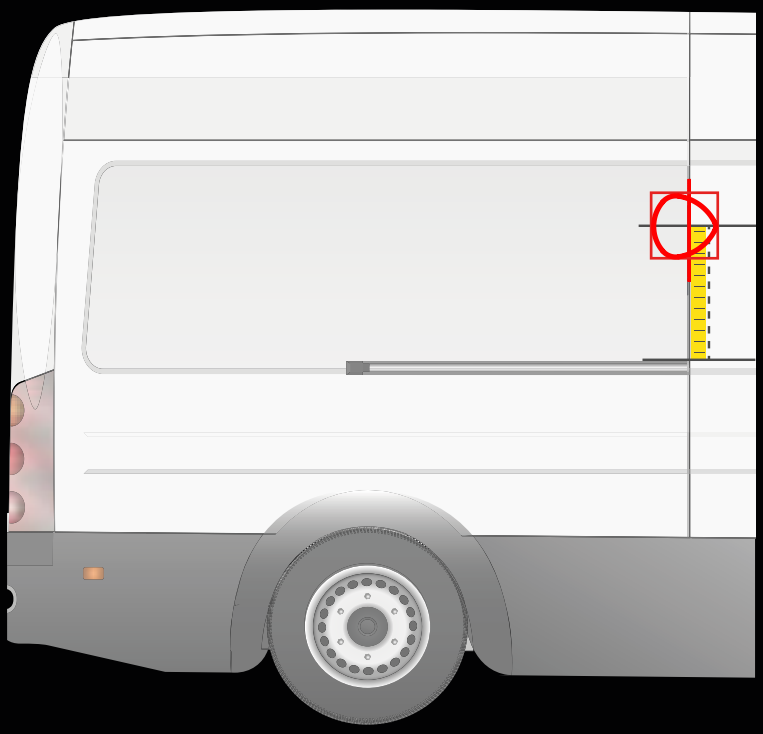

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**24 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

BLACKSTONE

RENAULT EXPRESS VAN > 2020




INSTALLATION ON THE REAR DOOR

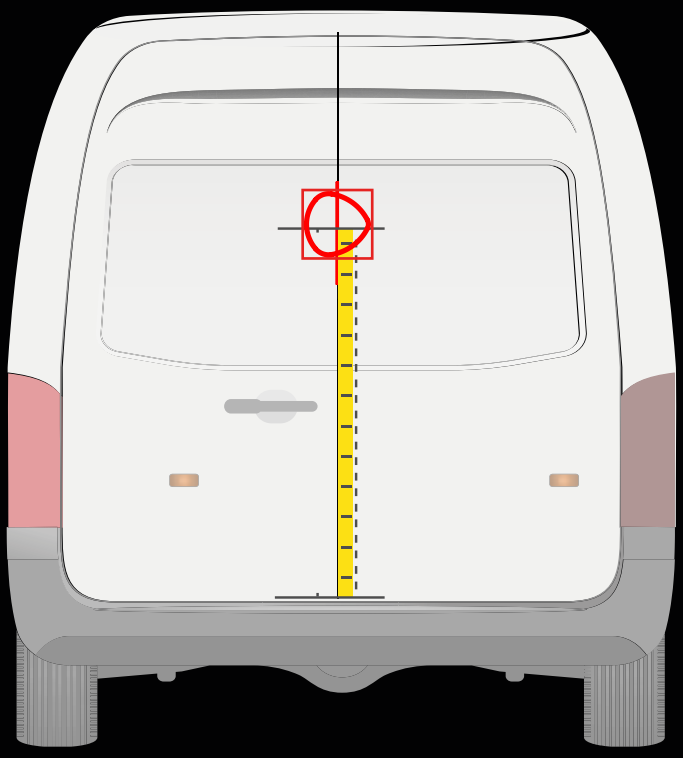

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**80 cm**

INSTALLATION ON THE LATERAL DOOR

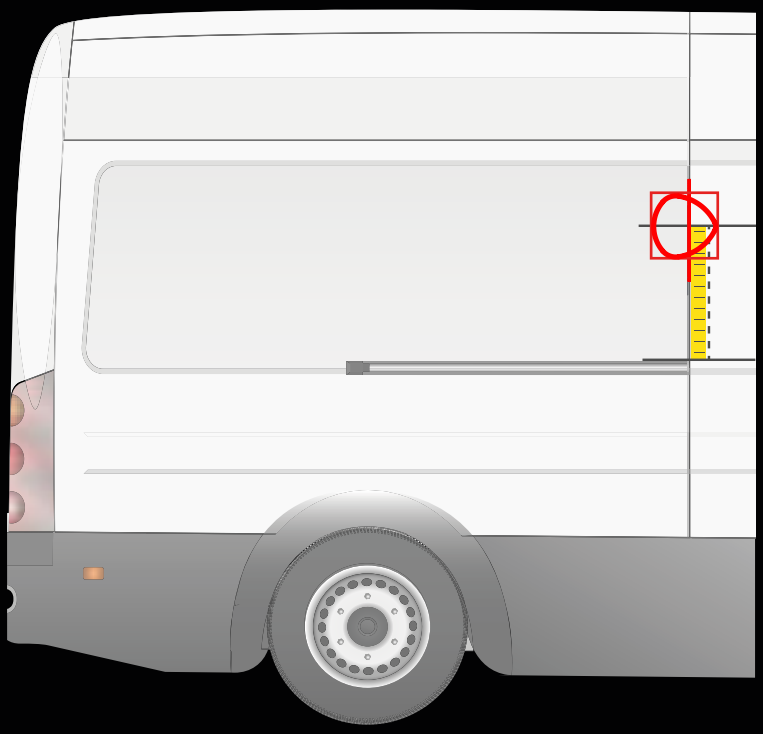

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

BLACKSTONE

RENAULT TRAFIC > 2014




INSTALLATION ON THE REAR DOOR

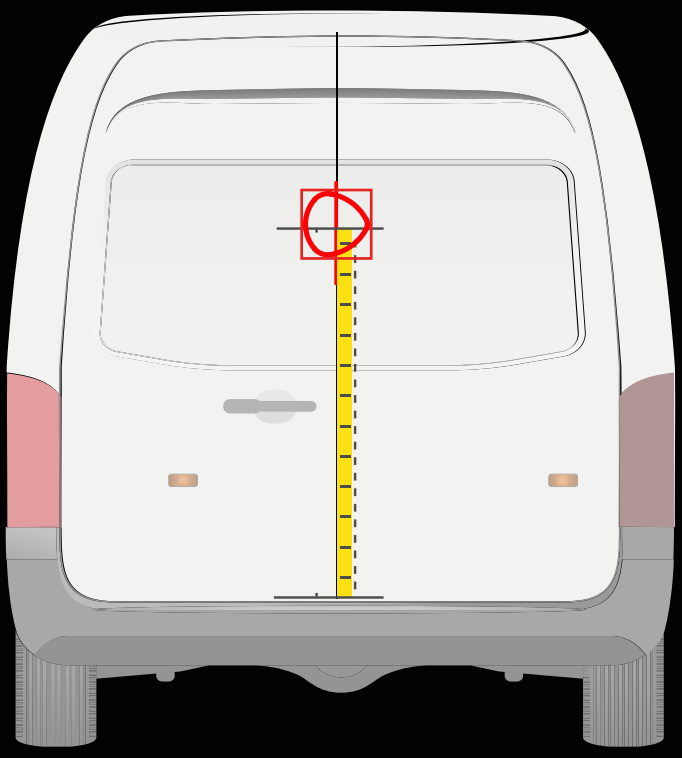

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**84 cm**

INSTALLATION ON THE LATERAL DOOR

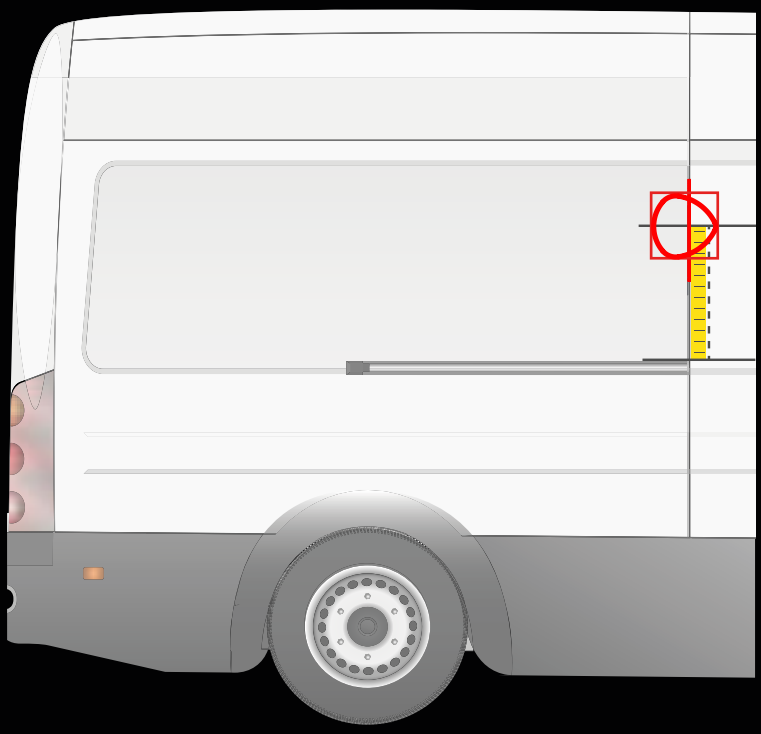

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

BLACKSTONE

RENAULT MASTER
2019 - 2023




INSTALLATION ON THE REAR DOOR

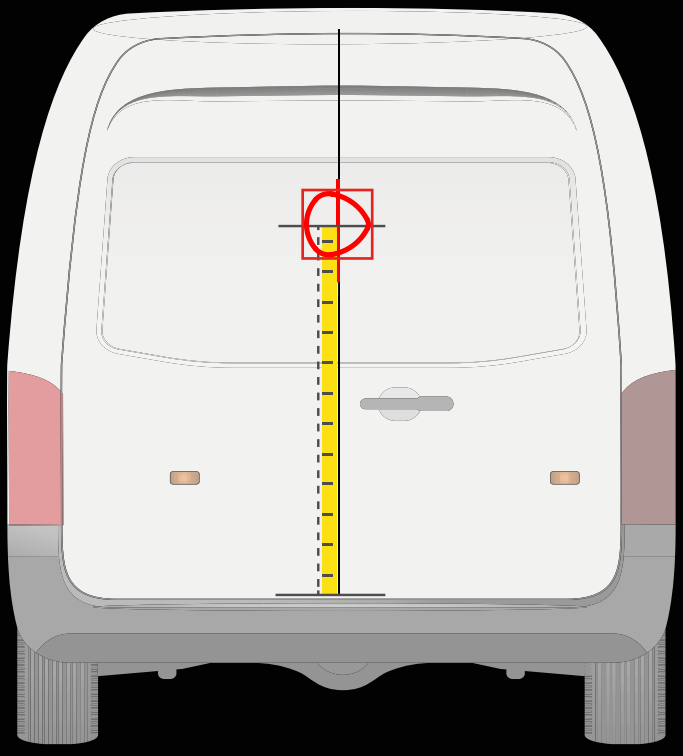

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**110 cm**

INSTALLATION ON THE LATERAL DOOR

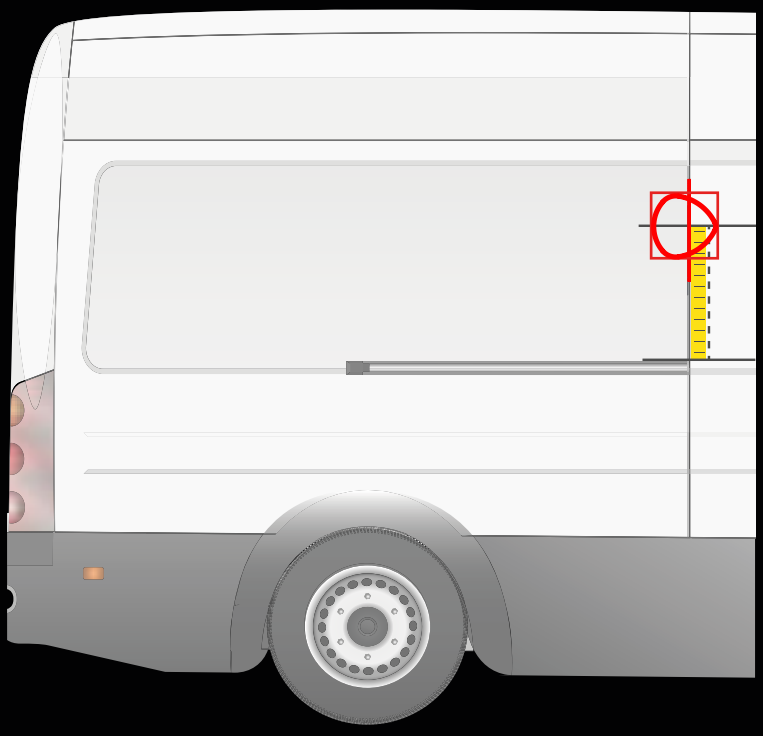

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

BLACKSTONE

RENAULT MASTER
> 2024




INSTALLATION ON THE REAR DOOR

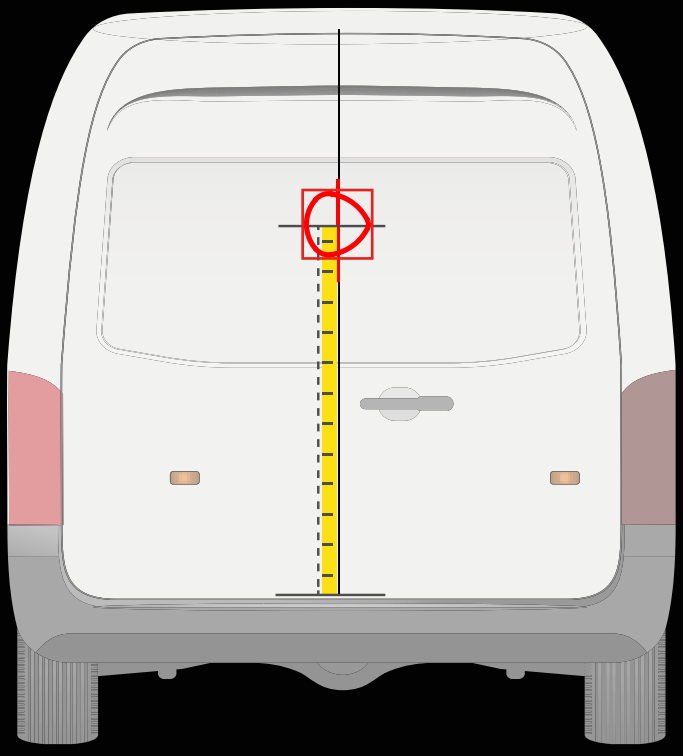

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**120 cm**

INSTALLATION ON THE LATERAL DOOR

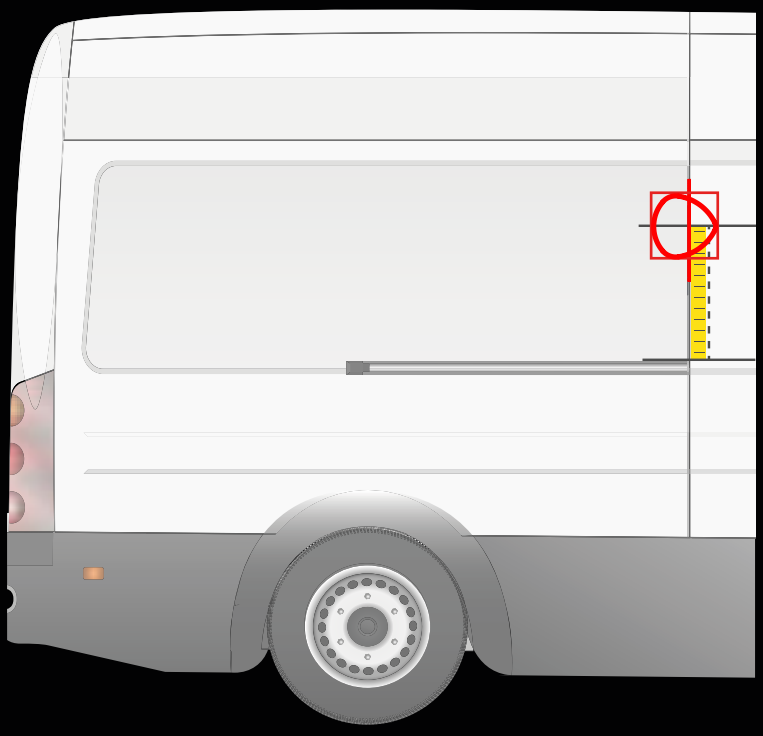

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

TOYOTA

TOYOTA PROACE CITY
> 2020




INSTALLATION ON THE REAR DOOR

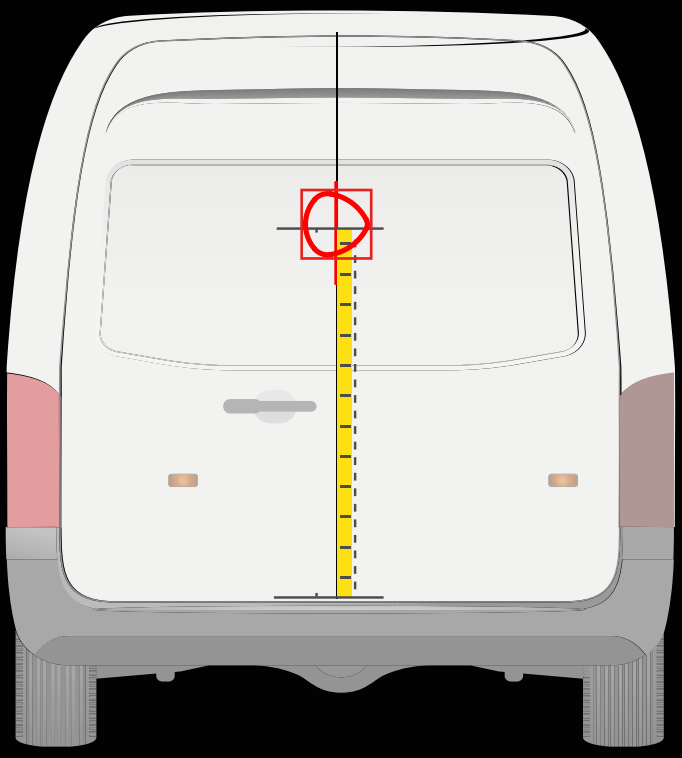

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**80 cm**

INSTALLATION ON THE LATERAL DOOR

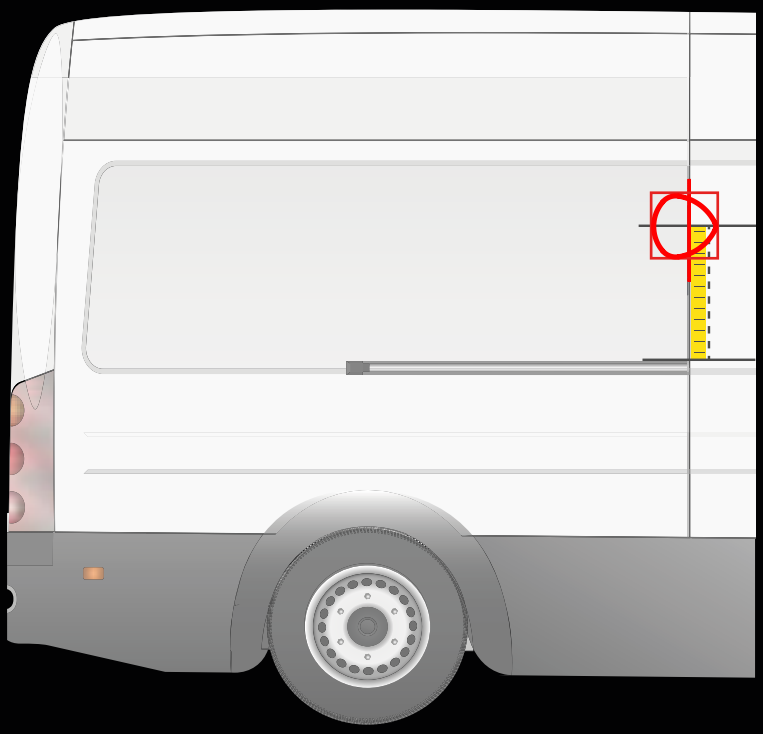

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**25 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


BLACKSTONE

TOYOTA

TOYOTA PROACE
> 2016




INSTALLATION ON THE REAR DOOR

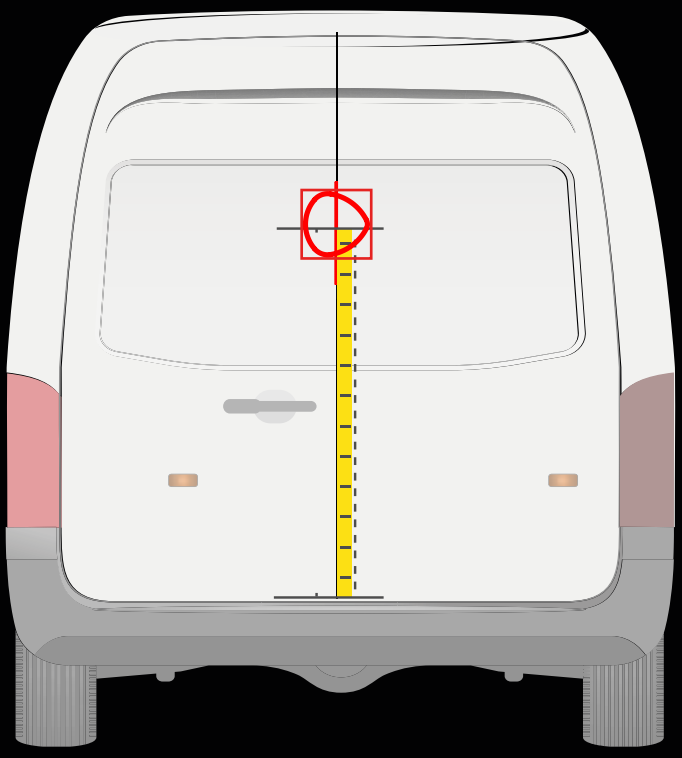

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**95 cm**

INSTALLATION ON THE LATERAL DOOR

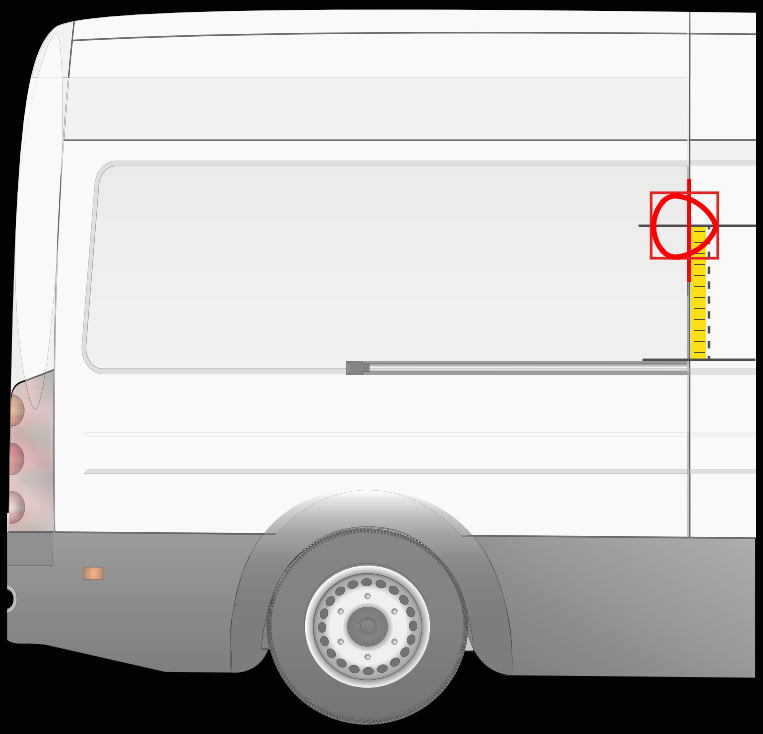

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

BLACKSTONE

VOLKSWAGEN CADDY
2021 - 2024




INSTALLATION ON THE REAR DOOR

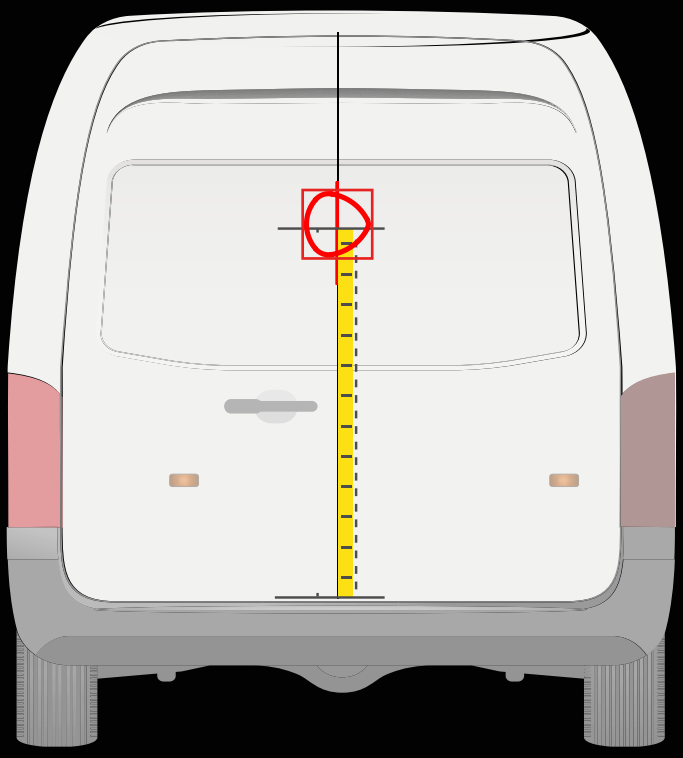

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**70 cm**

INSTALLATION ON THE LATERAL DOOR

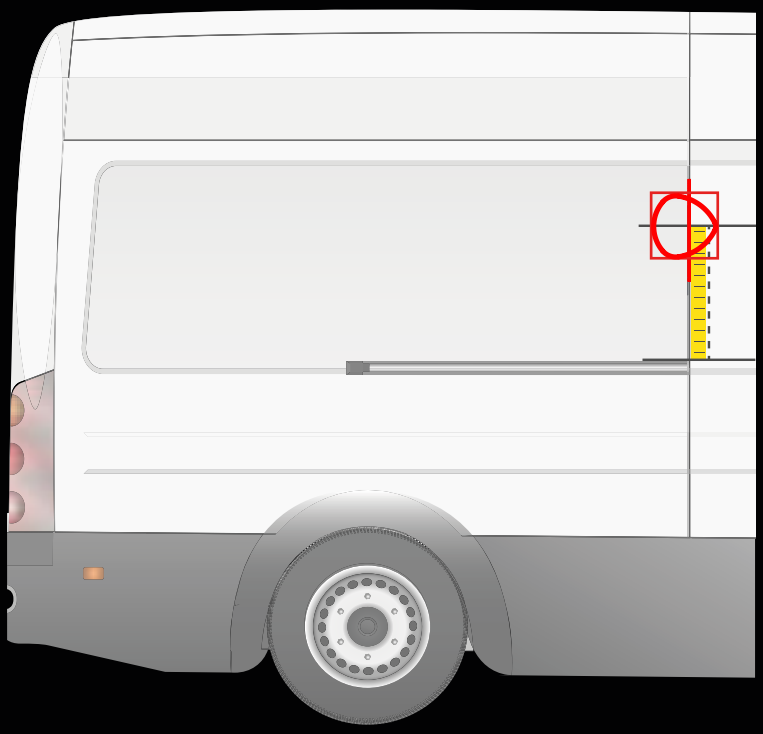

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**10 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

BLACKSTONE

VOLKSWAGEN CADDY
> 2024




INSTALLATION ON THE REAR DOOR

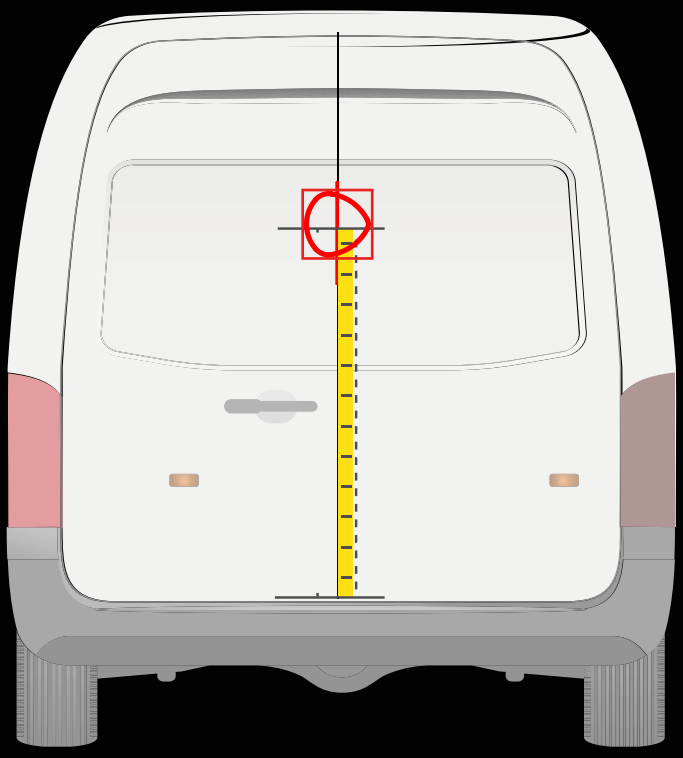

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**85 cm**

INSTALLATION ON THE LATERAL DOOR

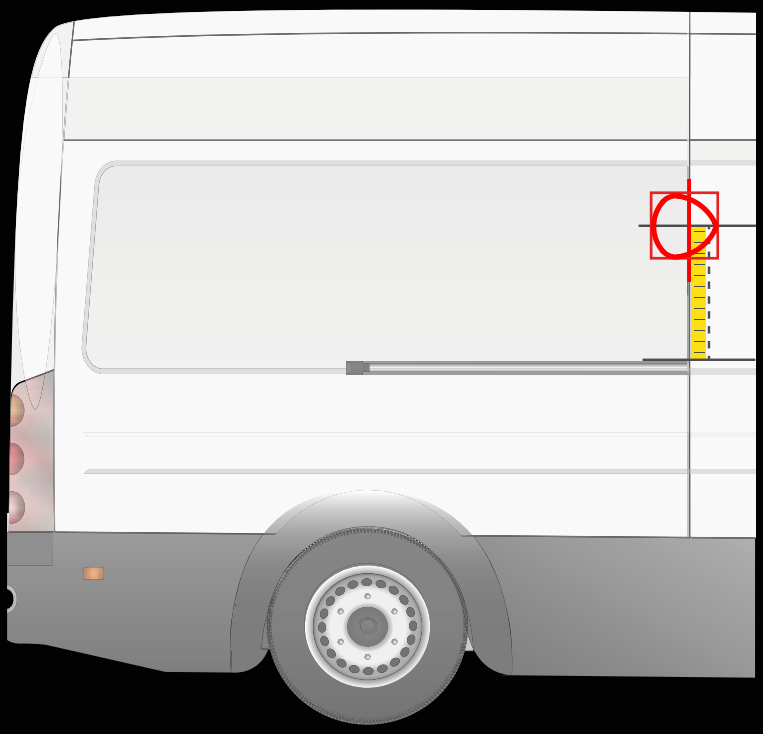

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

BLACKSTONE

VOLKSWAGEN TRANSPORTER > 2014




INSTALLATION ON THE REAR DOOR

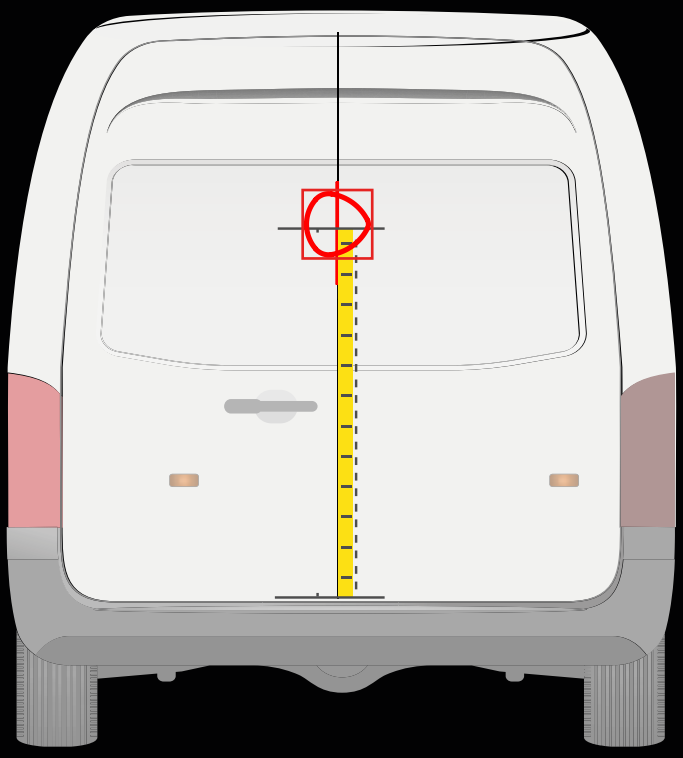

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**95 cm**

INSTALLATION ON THE LATERAL DOOR

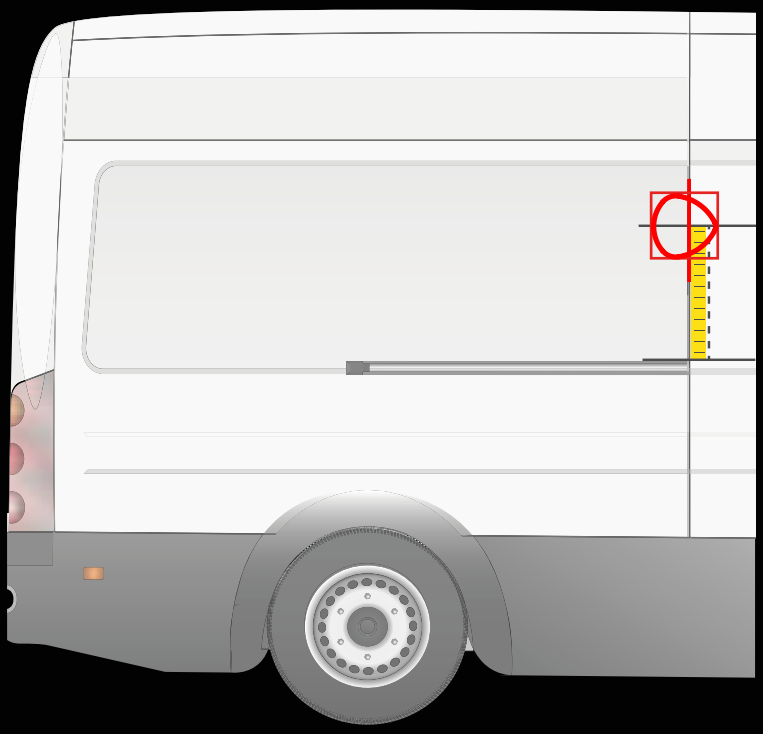

! Place the drill template as shown in the picture.


Distance from the door track to the central axis of the drill template	**40 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

VOLKSWAGEN ID-BUZZ
> 2022




INSTALLATION ON THE REAR DOOR

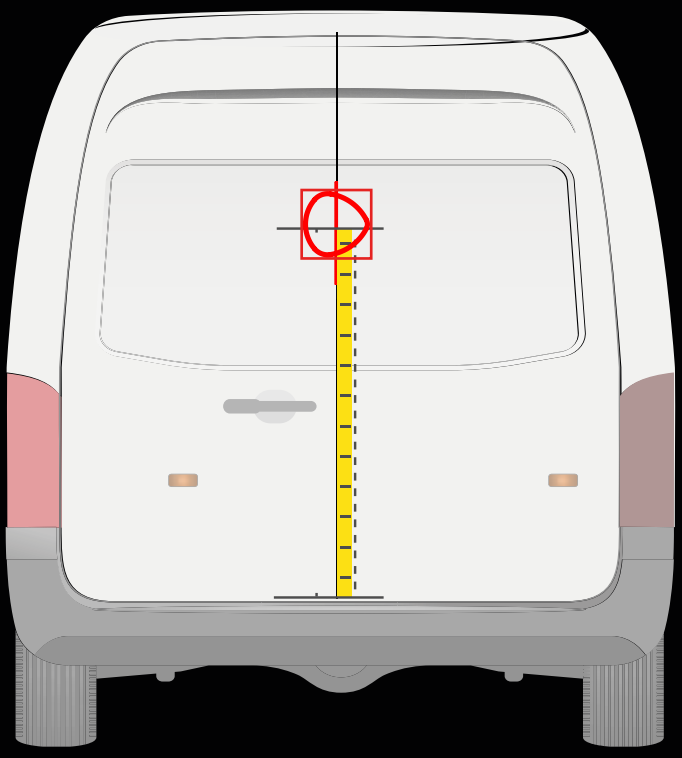

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**90 cm**

INSTALLATION ON THE LATERAL DOOR

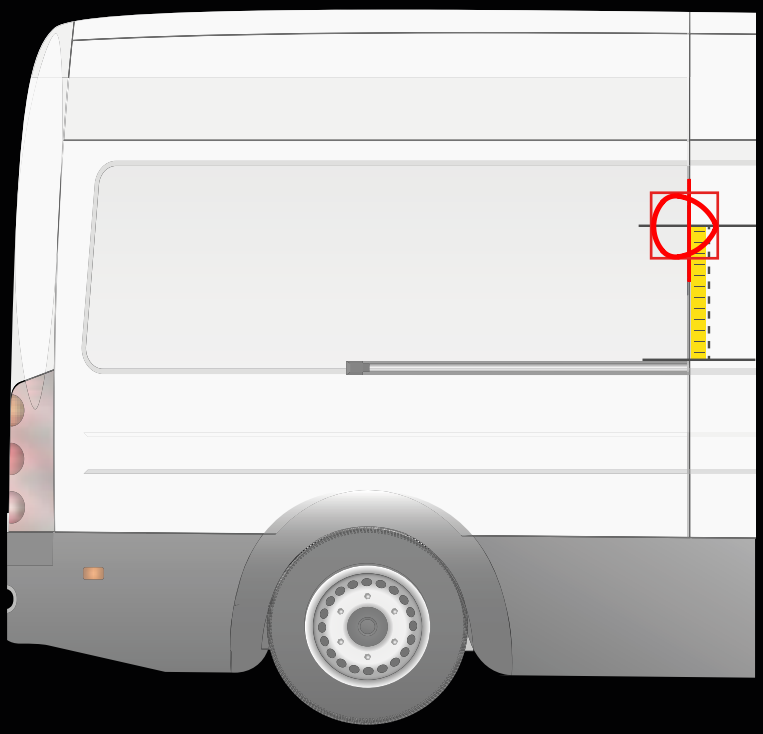

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

BLACKSTONE

VOLKSWAGEN CRAFTER > 2016




INSTALLATION ON THE REAR DOOR

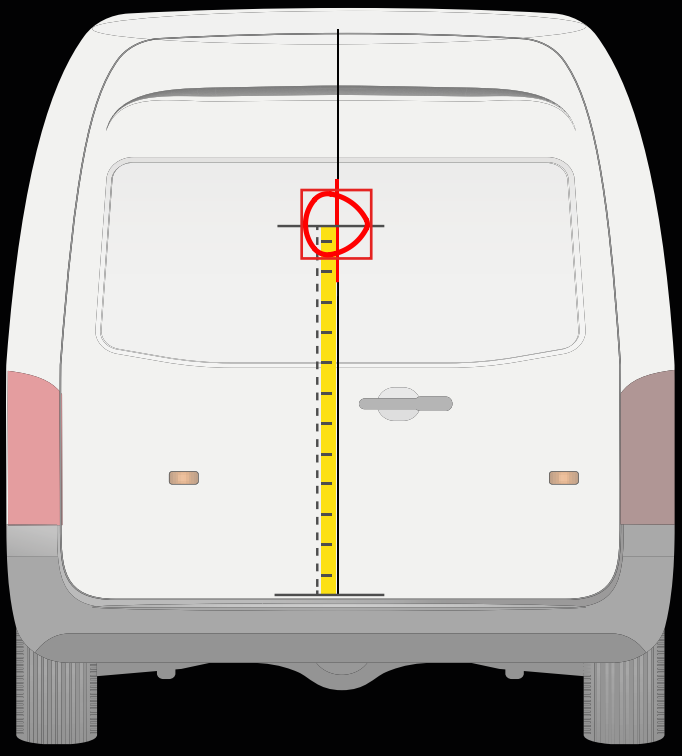

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**140 cm**

INSTALLATION ON THE LATERAL DOOR

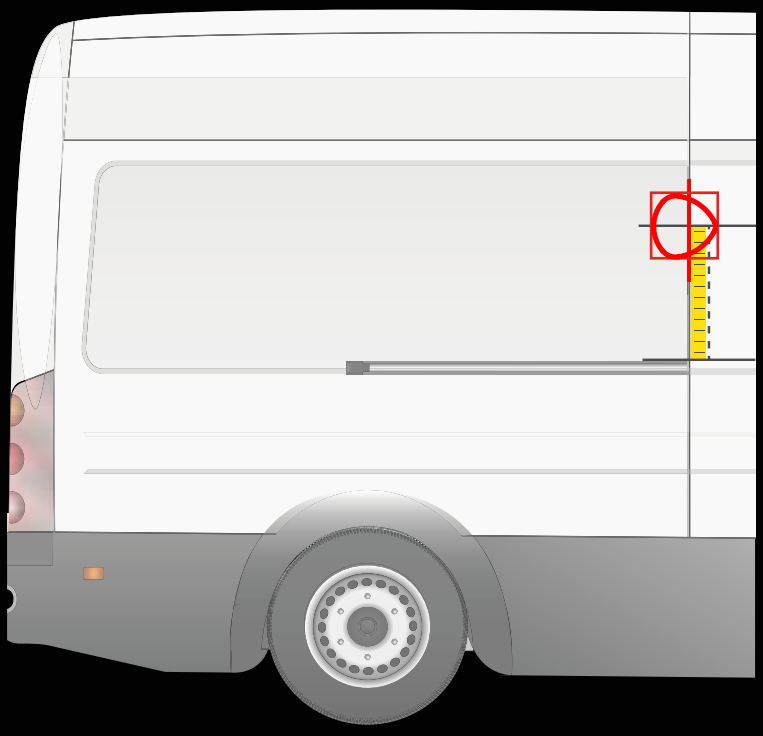

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.